2WD STADIUM TRUCK RTR

#560 / #564 Instruction Manual

Based on the

RAGING

www.hpiracing.com

HPI Racing USA 15321 Barranca Parkway Irvine, CA 92618 USA (949) 753-1099

www.hpiracing.co.jp

HPI Japan 3-22-20 Takaoka-Kita Hamamatsu Shizuoka, Japan 053-439-0833 HPI Europe Units 1-3 Queens Drive, Swadlincote, Derbyshire, DE11 OEG, England (44) 01283 229400

Tools and Equipment


Thank you for selecting this HPI racing truck! This kit is designed to be easy to build and uses top quality parts for durability and performance. The instruction manual you are reading was designed to be easy to follow, yet thorough in its explanations. HPI Racing wants you to enjoy both building and driving your new race truck. If you come across any problems or need some help getting through a step, give us a call and we will do our very best to help you. You can also contact us on the internet at hpiracing.com.

この度はHPIレーシング製品をお買い上げ頂きまして有難うございます。この製品はトップクオリティの部品を使い、初心者にも組み立てやすく、なおかつ ハイレベルな走行が出来る様に設計されています。

この説明書は、初心者の方にも簡単に組み立てて頂ける様に多くのイラスト、実寸表示のイラスト等を使い説明してあります。初めてラジコンエンジンカーを

走らせる方のために、セットアップのページも用意致しましたので、こちらの方も良く読んでから楽しいラジコンライフをスタートして下さい。 私たちHPIレーシングでは、走らせる楽しみはもちろんの事、組み立てる事の楽しみも知って頂きたいと願っています。キットの組み立ての事で、不明な点が ありましたら、どうぞお気軽に電話でお問い合わせ下さい。

Included inside: キットに入っている工具

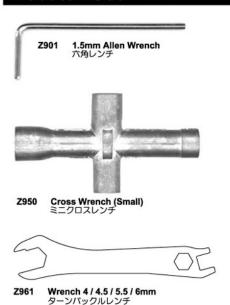



Equipment needed: 別にお買い求め頂く物







ネジロック剤

9067 Fuel Bottle (HPI) フューエルポンプ

Glow Fuel グロー燃料

Fuel And Glow Igniter

You will need glow fuel (specifically designed for model car engines) and a glow plug igniter to start the engine.

ラジオペンチ


グロー燃料 エンジン始動用にプラグヒーターが必要です。


プロポシステム (#560プロポ付完成車には必要ありません。) Radio Gear Needed (for #564 Rush without Radio)


Radio Control System

You will need a 2-channel radio system with two servos, an external receiver battery pack and an ON/OFF switch.

プロポシステム (無線装置)

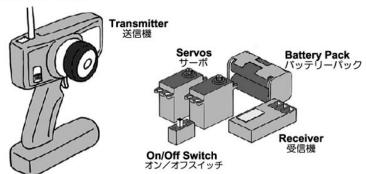

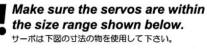

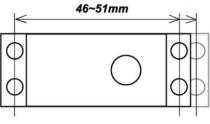





Observe These Cautions!

To prevent any serious personal injury and/or damage to property, please be responsible when operating all remote controlled models. Extra attention is called for when operating any glow fuel powered model. These models can exceed speeds of 31 mph (50km/h) and use highly poisonous and flammable fuels.

CHOOSE THE RIGHT PLACE TO OPERATE YOUR R/C MODEL

Never operate R/C models anywhere listed below:

- 1. On any public streets or highways this could cause serious traffic accidents, personal injuries and/or property damage.
- 2. Near people or animals never run your model anywhere using people or animals as markers or obstacles.
- 3. In hallways, alleys or any other restricted or confined areas that can cause personal injuries and/or property damage.
- 4. Anywhere where loud noises can disturb others, such as around hospitals or residential areas.
- 5. During the early morning or late night hours when visibility is limited and loud noise can disturb neighbors.
- 6. Indoors or around furniture there could be a chance of the R/C model damaging the surface or any objects in the area.

NEVER RUN ANY TYPE OF R/C MODEL IN THE VICINITY OF HEATING DEVICES OR OPEN FLAMES

Glow fuel powered R/C models use highly flammable fuels. Do not smoke when fueling or operating a glow fuel powered R/C model, and do not run near open flames or heating devicesdoing so can cause explosions and/or serious accidents.

OPERATE GLOW FUEL POWERED MODELS IN AN OPEN, WELL VENTILATED OUTDOOR AREA

Glow fuel powered model engines emit poisonous vapors and gasses - these vapors irritate the eyes and can be highly dangerous to your health.

NEVER USE GASOLINE

Engines used in R/C models were specifically designed for use only with approved glow fuels. Non-approved fuels such as gasoline can cause explosions and serious personal injuries and/or property damage.

GLOW FUEL ENGINED R/C MODEL OPERATING PROCEDURES

Follow this set of rules to prevent "runaways":

- 1. Always have the R/C model atop a box or similar platform so that the tires do not touch the ground.
- 2. When starting, always turn on the transmitter first, then the receiver.
- 3. Before fueling or starting model, double check servos, trims, throttle linkage, brake, fuel tank, fuel lines and receiver battery pack voltage. Re-adjust or replace worn or defective parts.
- 4. Fill fuel tank slowly and carefully to avoid overflowing or spilling of fuel. Wipe any excess fuel off immediately. Tightly close fuel tank cap and ensure that it's properly sealed.
- 5. We recommend you run the tank dry to turn off the engine. If you must stop before the tank is empty, properly discard the excess fuel in a safe container.
- 6. When stopping, always turn off the receiver battery pack first, followed by the transmitter.

CERTAIN PARTS WILL BE VERY HOT

With any engine powered vehicle, certain engine components get very hot during operation. Never touch the cylinder cooling head, muffler, or exhaust pipe - doing so could cause burns or other personal injuries.

BE AWARE OF ROTATING PARTS

When the engine is running, there are certain parts that rotate at high speeds. Do not touch the drive gears, belts, drive shafts, wheels, etc. during operation- doing so could cause serious personal injuries.

RADIO PRECAUTIONS

Before every run, ensure that you are the only one operating on your particular frequency. Also check that the transmitter and receiver battery packs are sufficiently charged. Failure to do both could cause a loss of vehicle control and could result in serious personal injuries and/or property damage.

FUEL TANK PRECAUTIONS

Before every run, ensure that the fuel tank cap is tightly sealed. fuel leaks can cause fires or explosions. Also, never transport or store an R/C model with fuel in the fuel tank. Doing so could result in personal injuries and/or property damage.

GENERAL FUEL PRECAUTIONS

Glow fuels contain Methanol and Nitro Methane - both highly flammable and poisonous chemicals. Avoid contact with eyes and skin. Never use glow fuel indoors - only in well ventilated areas. Glow fuel emits harmful vapors and can be hazardous to your health. Read all warning labels and instructions prior to use. Keep all fuels and chemicals away from children.

Never use glow fuels in any other engine except those designed for use with glow fuels. Also, never substitute any other type of fuel in place of glow fuels- especially gasoline. Doing so could result in explosions and serious personal injuries and/or property damage.

STORING GLOW FUEL

Do not store glow fuel indoors or where children can easily access it. Instead, store glow fuel in a safe, well ventilated place, away from heating devices, open flames, direct sunlight or batteries. If glow fuel spills, wipe spill immediately to prevent any fire hazards. Do not store glow fuel in any other container than that which it came in. Keep glow fuels and any other dangerous chemicals away from children.

IN CASE OF EMERGENCY

Glow fuels are extremely dangerous when used improperly. Here are some first aid tips when using glow fuel:

- 1. If glow fuel is swallowed, induce vomiting and contact a physician immediately.
- 2. In case of eye contact, flush eyes thoroughly with warm (not hot) water and contact a physician immediately.
- 3. In case of skin contact, wash areas with warm (not hot) water and soap.











Read the Radio Instruction Manual to learn all of the features of the HPI TX2 radio system. If you are using your own radio system, refer to your system's manual for proper operation.


HPI TX-2 の取り扱いは、別紙の説明書をご覧下さい。 市販のプロポセットの取り扱いは、

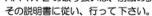

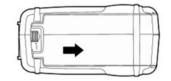


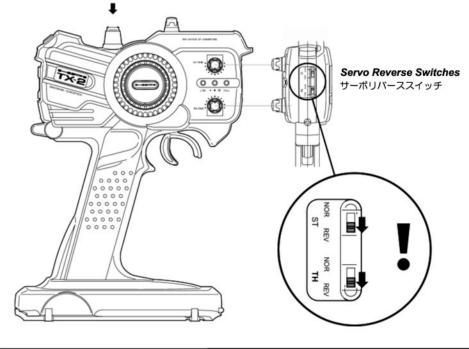

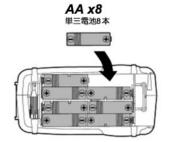

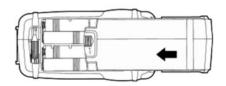



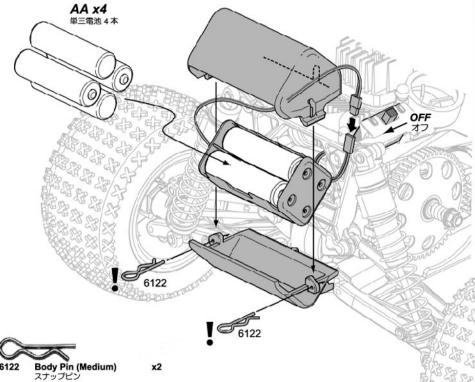










Complete steps 7 - 6 to install your own radio system. Skip these steps if you have the #560 RTR version.

#560 ナイトロラッシュRTR(プロポ付完成車)御購入のお客様は、 7ページの 7 へ進んで下さい。

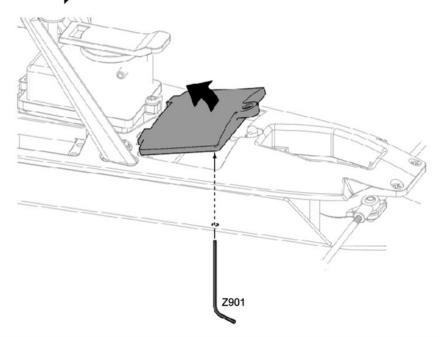




TP. Flanged Screw M3 x 10mm x 5

タッピング フランジネジ

Important! 重要!

TP. Binder Head Screw M3 x 15mm x 4 パインド タッピング ネジ

See page 9 for throttle linkage setup and adjustment. 9ページのスロットルリンケージセットアップを参照してください。

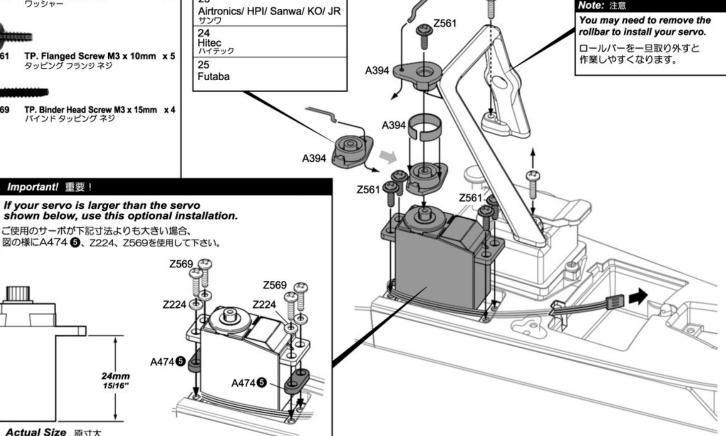





Actual Size 原寸大

24mm 15/16"




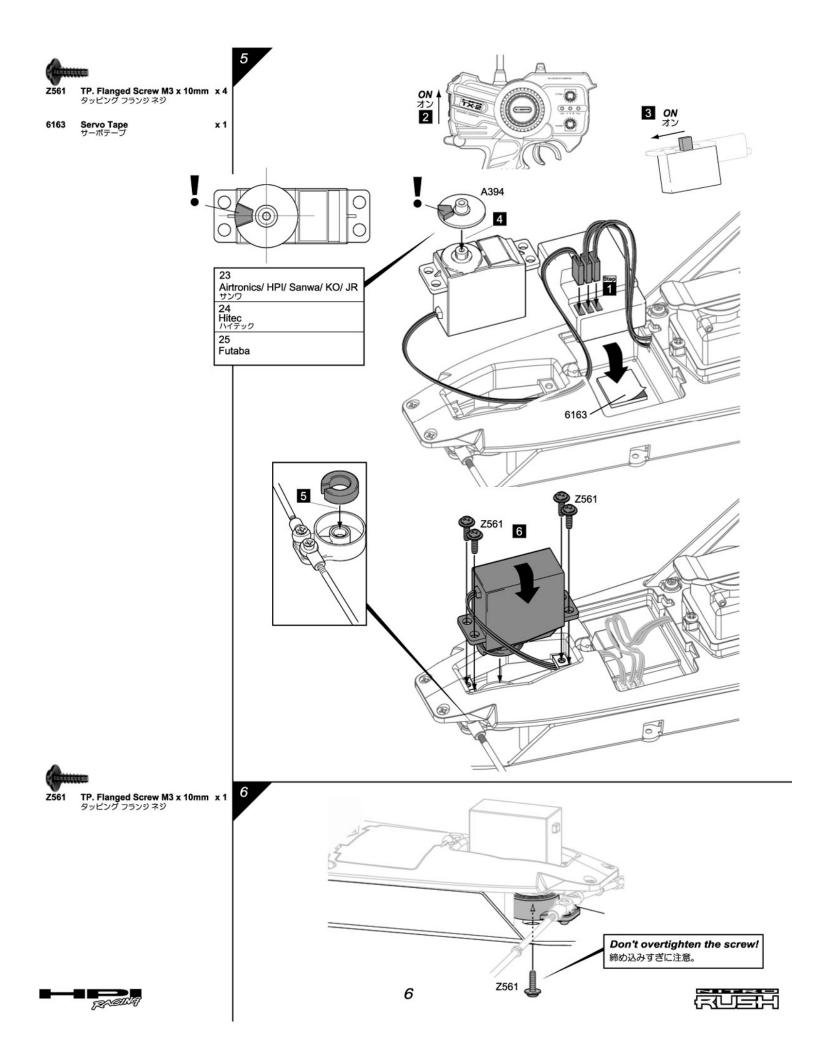

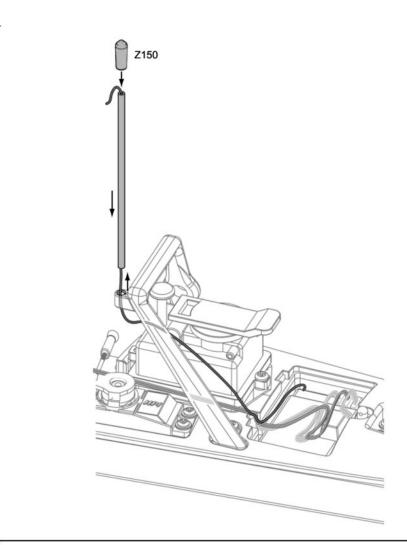



x 1

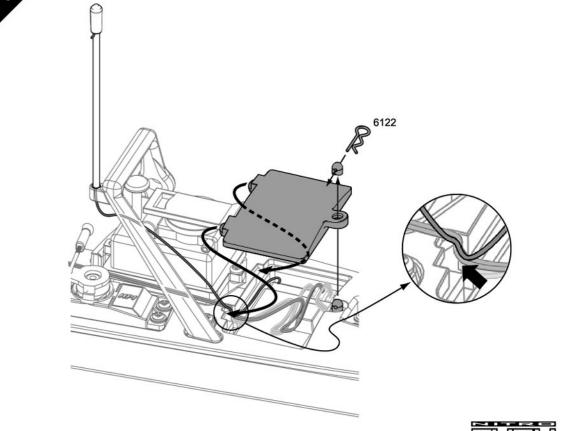







5122 Body Pin (Medium) X スナップピン





Remove Protective Film. Apply decals and install the wing. Secure the body with body clips. 保護フィルムをはがします。ボディーデカールの仕上げと取り付け。

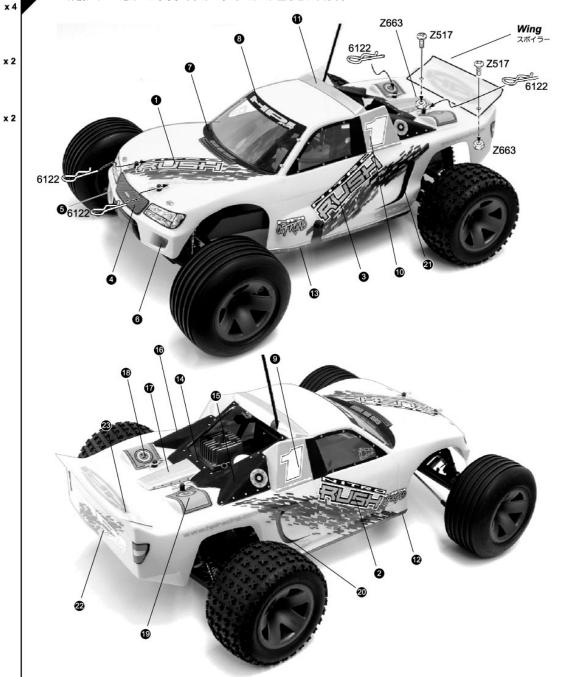

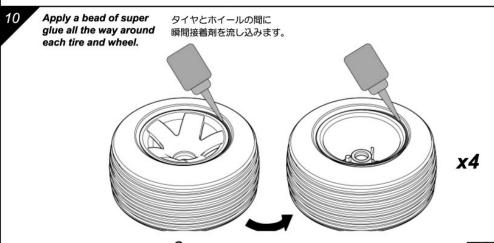





Linkage Setup

スロットルリンケージセットアップ


Linkages are NOT pre-set at the factory! Make adjustments with the engine off!

走行前に必ずチェックして下さい。 エンジンは止めた状態でセットして下さい。


SETTING NEUTRAL


With Engine Off:


- 1. Turn on transmitter.
- 2. Turn on receiver.
- 3. Center throttle trims.
- 4. Adjust a so there is a 1mm carb opening.
- 5. Adjust 6 so carburetor never closes more than 1mm.
- Adjust so brake does not drag at neutral. You should be able to push the car about 5 feet. If the brake drags at neutral you will melt the clutch.

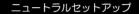

- 1.送信機のスイッチをON にします。
- 2.受信機のスイッチをONにします。
- 3.スロットルのトリムを中心位置に しておきます。
- 4.キャプレターの口が 1 mm になる

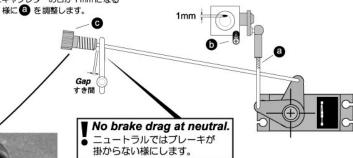

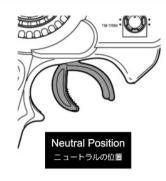

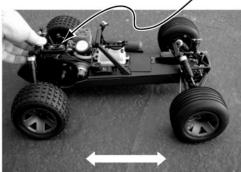

Neutral Adjustment

Adjust the brake so that the car rolls easily at neutral throttle (with the transmitter and receiver ON). Use the plastic brake adjustment knob to adjust the brake so that there is a small gap between the spring and brake arm at neutral throttle. Roll the truck back and forth to make sure the brake is not dragging. The car should roll about 5 feet if you give it a firm push.

ブレーキ調整をするときは必ず送受信機のスイッチをONにしてから行ってください。 ニュートラル時には、ブレーキアームとスプリングの間に少し隙間を設けて下さい。 ニュートラルではブレーキが掛からない様にします。

SETTING FULL THROTTLE フルスロットルセットアップ


With Engine Off:


1. Pull full throttle.

2. Make sure the carburetor is open.

全開時のセット

1.スロットルトリガーを全開位置に します。

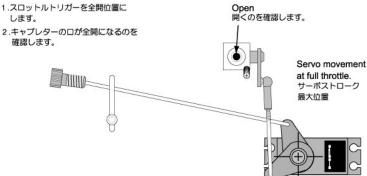

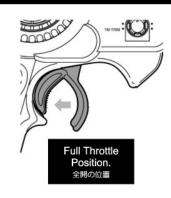

SETTING FULL BRAKE


ブレーキセットアップ


With Engine Off:

- 1. Push trigger to the full brake position.
- 2. Try pushing the car to make sure the brake works.

プレーキ時のセット

- 1.スロットルトリガーをブレーキ位置に します。
- 2.車を手で押してみて、ブレーキが効く 事を確認します。

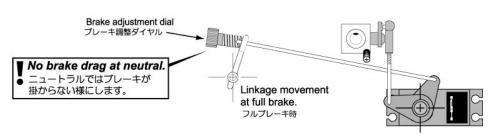

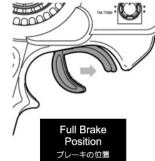





Starting For The First Time エンジンスタート

Turn On Radio 電源の入れ方

Let's get ready! First, read the instructions for your radio completely. If you lose control due to radio problems it will damage the car and motor. Install fresh batteries in transmitter and receiver pack. Extend radio and receiver antennas.

走行(エンジン始動)方法

アンテナを伸ばし、送信機、受信機の順番でスイッチを入れて下さい。 キャブレターが アイドリング状態 (スローの位置) になっているか 確認して下さい。

- 1. Switch on transmitter.
- 2. Switch on receiver.
- 3. Make sure servos function properly.
- 4. Check the range of radio by walking away from car.
- 1. 送信機をONにします。
- 2. 受信機をONにします。
- 3.キャブレターがアイド リング状態になってい るか確認して下さい。





After the transmitter is on, turn on the receiver. 受信機をONにします。

Fuel Filling 給油

Let's fill up the fuel tank. Make sure you buy good quality fuel designed specifically for R/C cars. Low priced fuel has less lubrication and less cooling ability. New engines are the easiest to damage from low quality fuel!


各社エンジン取扱説明書をよくお読み下さい。 ードルの調整等確かめた上初めて下さい。

NOTE: 注意

Never use fuel near a heat source or near open flames!

. 燃料は引火性が強いので、火気のある所や高温な場所での 給油はお避け下さい。

- 1. Fill tank with high quality R/C car glow fuel.
- 2. Close cap securely after filling.
- 1.15~30%程度のグローエンジン専用燃料をご使用下さい。
- 2. 燃料タンクのキャップは締まっているか確認して下さい。

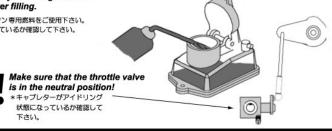

Priming Carb チョーク

It's time to force the fuel through the fuel lines to the carburetor. Watch the bubbles in the fuel tubing while pushing the primer button to see when the fuel reaches the carburetor.

NOTE:

Do not over-prime the carb. Doing so will 燃料が入り過ぎますとオーバーチョーク となり、エンジンが始動しません。

flood the carburetor!

1.チョークボタンを数回押します。

2. 燃料がキャブレターの入り口まできましたらあと1~2回ボタンを押して下さい。



1. Push fuel primer button

until fuel reaches throttle inlet.

fuel to enter throttle valve.

2. Press button two more times to allow

Starting Engine エンジンの始動

Raise the car so that wheels are not touching the ground. Attach glow plug heater and pull recoil starter several times quickly. Don't pull the cord all of the way out!

送信機のスロットルトリムを3コマ程上げておきますと、エンジンが 始動しやすくなります。

NOTE: 注意

High RPM during the break-in period and/or pulling the recoil starter cord beyond 10" or 25cm can damage the engine. プルスターターのコードは、26 cm以上引きますと破損する 場合が有りますのでご注意下さい。

1. Attach glow plug heater.

- 2. Pull recoil starter using quick, short strokes.
- 3. Open throttle valve halfway.
- 1. ブースターコードをプラグにつなぎます。
- 2 プルスターターを引きます。
- 3. スロットルを中程上げて回転を安定させます。

Don't pull more than 10" or 25cm. 引っ張る長さは

25cmが目安です。

エアークリーナー、マフラー出口、

NOTE: Make sure there are no obstructions blocking the muffler, air cleaner, or rotating parts (spur gear, clutch bell. etc.).

又ギヤーなどの回転物のまわりに なにもないか確認します。

注意



Over-Primed オーバーチョーク


If there is too much fuel inside the cylinder the engine will not start; this is called "over-primed". To fix this problem, follow these instructions. エンジンの中に燃料を送りこみ過ぎた場合、エンジンがスタート しません。これをオーバーチョークと言います。次の手順で、 オーバーチョークを直します。

NOTE: 注意

Make sure that the opening to the cylinder is pointed away from you or anyone else. Be careful, fuel will spray out from the cylinder!

周りの人に燃料がかからない様に声をかけてから始めて 下さい。燃料が、シリンダーヘッドから吹き出しますので目を近

- 1. Remove glow plug from the engine using a glow plug wrench.
- 2. Pull recoil starter until all of the fuel is removed from the cylinder. Wipe any fuel spills immediately. Avoid contact with skin
- ブラグレンチでブラグをはずします。
 ブルスターターをシリンダーヘットから燃料が出なくなるまで 何度か引きます。吹き出た燃料はすぐに布きれて拭いて下さい。 皮膚に燃料がかからない様に十分注意して下さい。

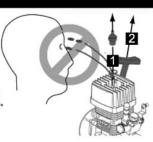

Caution! Be careful of fuel spraying out of the cylinder!

エンジン内から 吹き出る燃料に 気をつけて下さい。

Stopping Engine エンジンの止め方

We recommend driving the car until the tank is empty.


Here are two other ways to stop the engine: Cover air cleaner intake with your finger.
 Stop fuel supply by pinching the fuel lines.

NOTE: 注意

Be careful when stopping engine! Do not touch engine or muffler, they may be very hot. エンジンは高温になっていますので手を触れないで下さい。

1. Run until fuel is depleted. or
2. Restrict airflow to engine.

1.燃料がなくなるまで走らせる。 2.エアークリーナーをふさぐ、 又はフューエルチューブをつまむ。 We recommend wearing rubber gloves to protect hands from fuel.

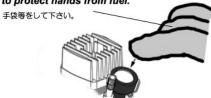






Troubleshooting Guide

Problem	Possible Causes	Solution	
Engine does not start	Fuel tank is empty or throttle valve is not primed.	Fill fuel tank with fuel and prime throttle.	
	Bad glow plug or dead plug booster battery.	Replace glow plug and recharge or replace battery.	
	Fuel lines, air cleaner, or muffler is clogged.	Clean or replace clogged part(s).	
	Engine is flooded due to over-priming.	Remove glow plug and discharge fuel. Also, test the glow plug. Replace the glow plug if it is defective.	
	Throttle valve not adjusted properly.	Set idle and needle valve to standard starting position	
	Servo linkage not adjusted properly.	Move servo to neutral then re-adjust.	
Engine starts but then stalls	Fuel tank is empty.	Fill fuel tank with fuel.	
Stalls	Fuel lines, air cleaner, or muffler is clogged.	Clean or replace clogged part(s).	
	Throttle valve not adjusted properly.	Re-adjust idle and needle valve to 2-1/2 turn out.	
	Engine is overheated.	Allow engine to thoroughly cool down and open needle valve 2 to 3 clicks.	
Limited reaction and response from engine or poor performance	Needle valve not adjusted properly.	Re-adjust needle valve to 2-1/2 turn out.	
	Low fuel pressure from muffler.	Properly install pressure line from muffler to fuel tank.	
Truck is hard to control	Weak transmitter and/or receiver batteries.	Recharge or replace batteries.	
	Low reception from radio antennas.	Fully extend transmitter and receiver antennas.	
	Servo linkage not adjusted properly.	Move servo to neutral then re-adjust.	
Melted clutch shoes	Brake is dragging during running.	Set brake so car rolls freely at neutral throttle.	

	原因	調べる箇所と直し方		
	燃料が入っていない。燃料がエンジンまで来ていない。	燃料タンクに燃料を入れ、エンジンまで燃料を送る。(チョーク)		
	ブラグが切れている。ブラグヒート用電池が減っている。	プラグを交換する。電池を新品に交換する。		
エンジンがかからない	燃料フィルターが詰まっている。 又は、エアクリーナー、マフラー内の汚れ	燃料フィルターの掃除、交換をする。エアクリーナー、 マフラー内の掃除		
エンシンがががらない	オーバーチョーク(チョークのしすぎ)	プラグを外しエンジン内の燃料を空にしてから再スタート プラグが切れていないかも再チェック		
	キャブレターの調整不足	ニードルパルブ、アイドリング調整ネジを元の基準位置に戻す		
	サーボリンゲージの調整不足	サーボをニュートラルにしてから、再度リンゲージをやり直す		
	燃料タンクに燃料が入っていない	燃料タンクに燃料を入れる		
エンジンはかかるが	燃料チューブ、エアクリーナー、マフラー内の汚れ	汚れ又は、詰まっている部分の掃除		
すぐに止まる。	スロットルバルブの調整不備	スロットルバルブ及びアイドル、ニードルの調整		
	エンジンのオーバーヒート	エンジンが冷えるのを待ってからニードルを2~3コマ開けて再 スタート		
	スロットルバルブ、ニードルバルブの調整不備	ニードルパルブを元の基準位置に戻してから再スタート		
エンジンがうまく吹き上がらない	マフラーからのプレッシャーが低い場合	燃料タンクからのブレッシャーチューブがちゃんとつながって いるか?チューブに穴が開いていないか		
	送信機、受信機のパッテリー不足	バッテリーの交換又は充電		
車が思いどうり動かない	電波の受信状態が良くない	送信機及び受信機のアンテナを完全に伸ばす		
	サーポリングージの調整不足	サーボをニュートラルにしてから調整し直し		
クラッチが溶けてしまう	走行中ブレーキが効いたままになっている。	ニュートラル (アイドリング) の状態でブレーキが 掛からない様に調整する。		





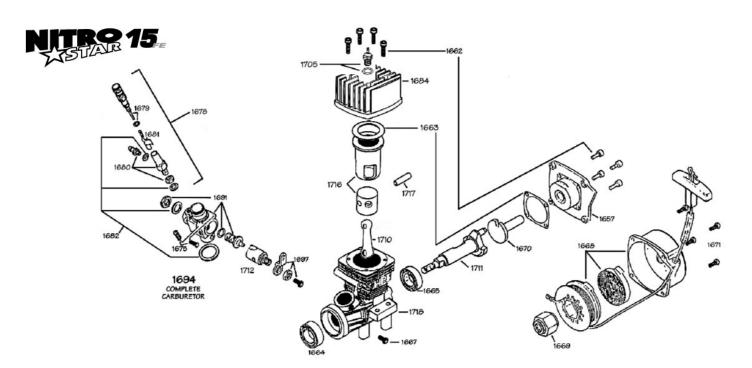

1615 Complete 15FE Engine

(Preassembled 組立済み)

HPI Nitro Star 15FE Parts					
1615	Nitro Star 15FE Engine	120.00	1684	Heat Sink Head (Die Cast/15)	12.00
1657	Cover Plate (Pull Starter)	7.00	1691	Carburetor (Main Body) Silver w/o Idle Screw	31.00
1662	Screw Set (8Pcs)	4.00	1694	Carburetor (Complete/4.6Mm/12E/15FE)	49.00
1663	Gasket Set	3.00	1697	Throttle Arm Set	3.00
1664	Crank Shaft Bearing (Front)	11.00	1705	Glow Plug	7.00
1665	Crank Shaft Bearing (Rear)	11.00	1710	Connecting Rod (12E/15FE)	14.00
1667	Screw Set (2Pcs/Carburetor)	2.00	1711	Crank Shaft (Pull Starter 12E/15FE)	41.00
1668	Pull Starter (No One-Way Bearing)	18.00	1712	Rotor Set 4Mm (12E/15FE)	14.00
1669	One-Way Bearing	18.00	1716	Cylinder And Piston Set (Nitro Star 15E)	48.00
1670	Starting Shaft	5.50	1717	Piston Pin (Nitro Star 15E)	4.00
1671	Screw Set (4Pcs/Pull Starter)	2.00	1718	Crank Case (Nitro Star 15FE)	27.00
1675	Adjust Screw Set (With Spring)	2.80	000000000000000000000000000000000000000	- 1-10 - 14 - 15 - 16 - 16 - 16 - 16 - 16 - 16 - 16	100 (200) XX (100)
1678	Needle Valve (Complete)	16.00	Opti	on Parts	
1679	Needle With O-Ring	8.00			
1680	Needle Valve With Holder	8.00	1634	Carburetor (Complete/5.5mm)	53.00
1681	Spring For Needle Valve	2.00	1703	Heat Sink Head For Nitro Star 15 (Purple)	45.00
1682	Carburetor Gasket Set (4 Pcs)	2.50			
					$\overline{}$

x 1

Ball M2 x 3.8 x 4.5mm ポール

A805


Pilot Shaft M5 パイロットシャフト

A886

Clutch Shoe

Clutch Spring クラッチスプリング A827

x 2

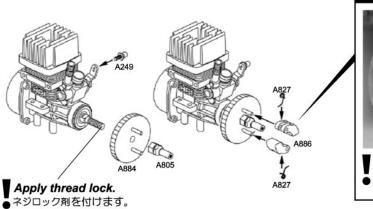

x 1

Preassembled 組立済み




End of clutch shoe points to the right. Springs attach as shown.

*向きに注意。 クラッチシューとスプリングは 図の様になります。


x 2






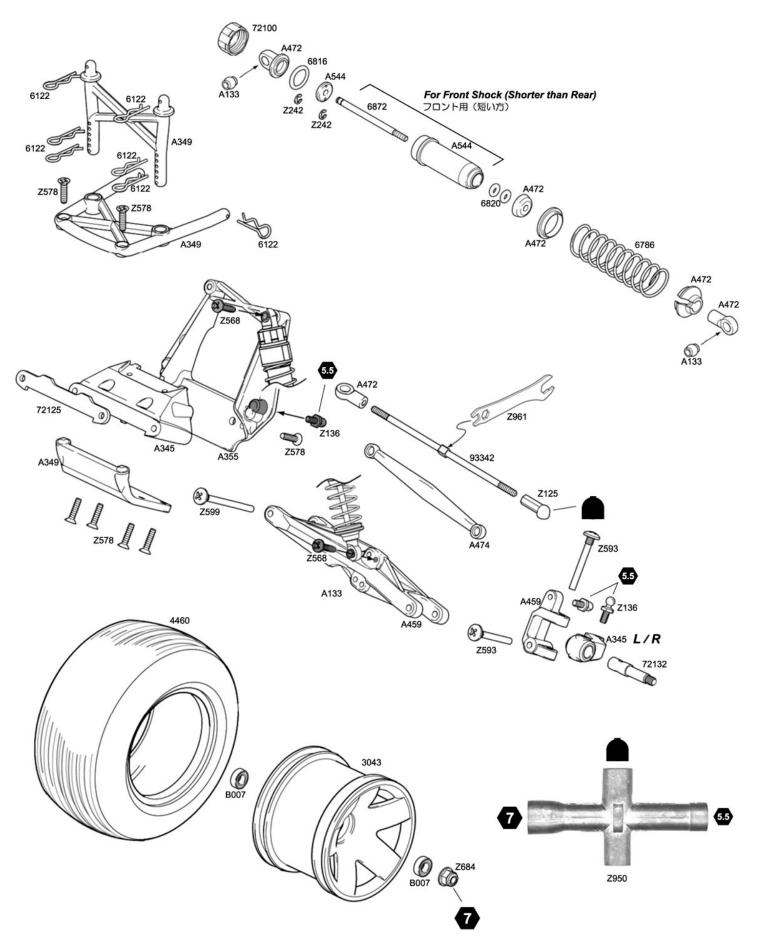




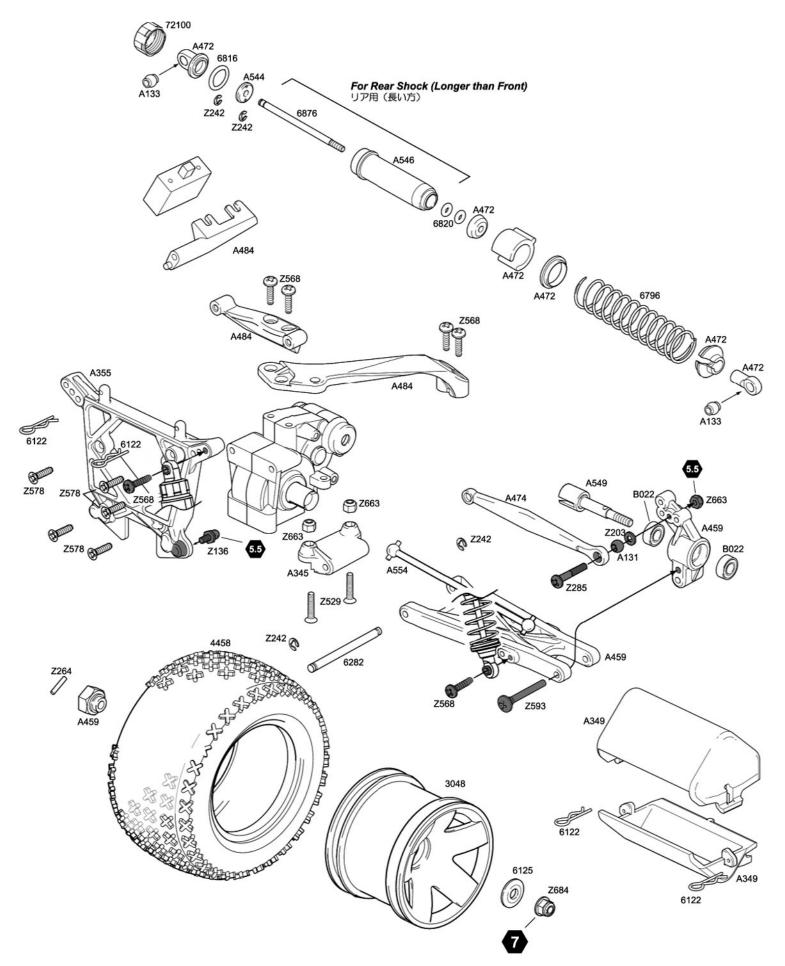



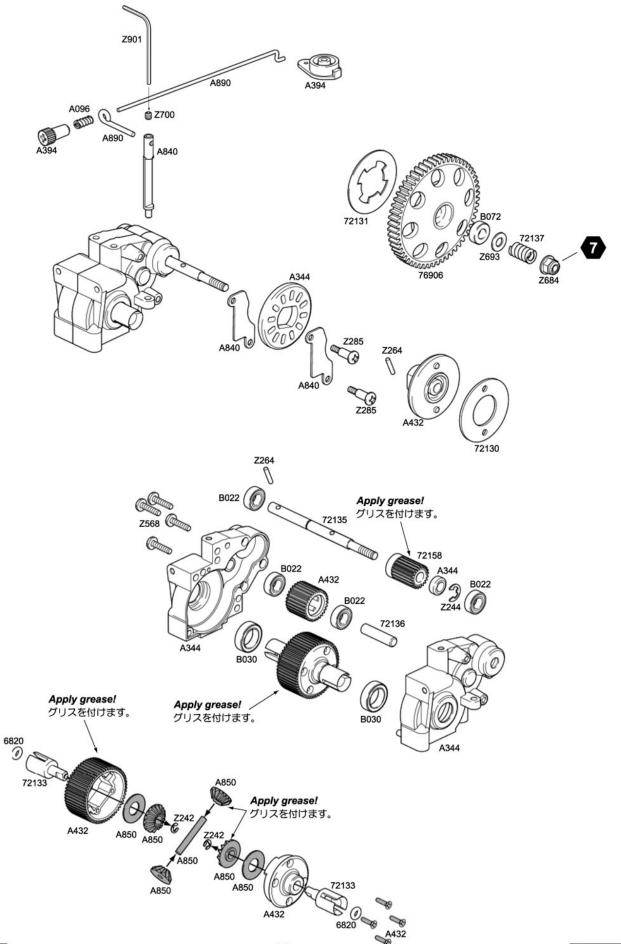




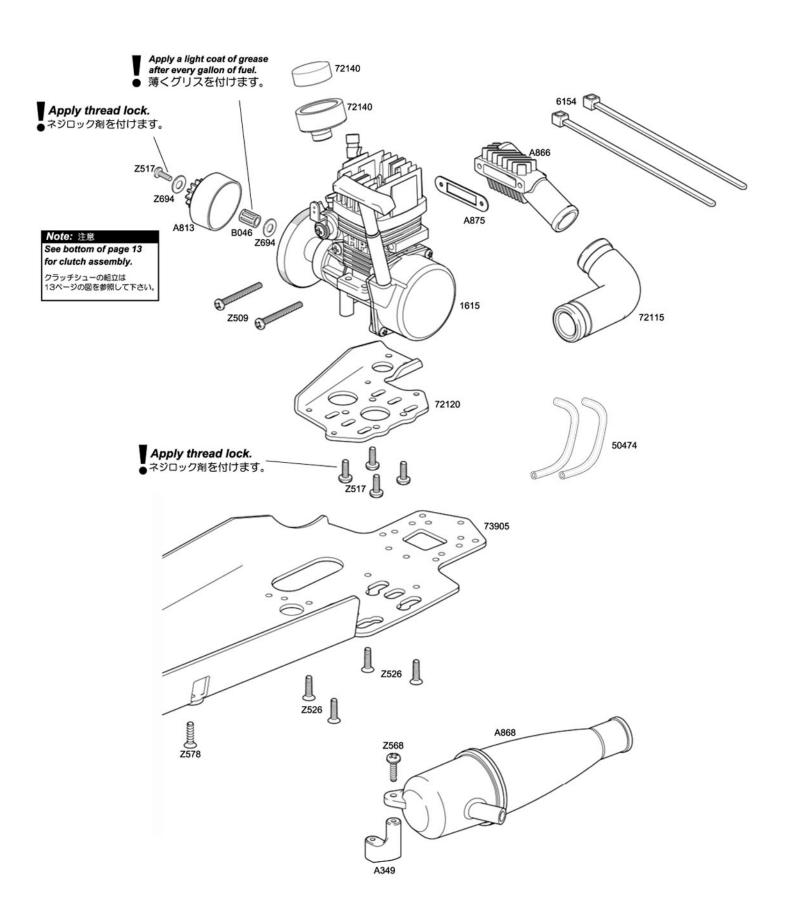






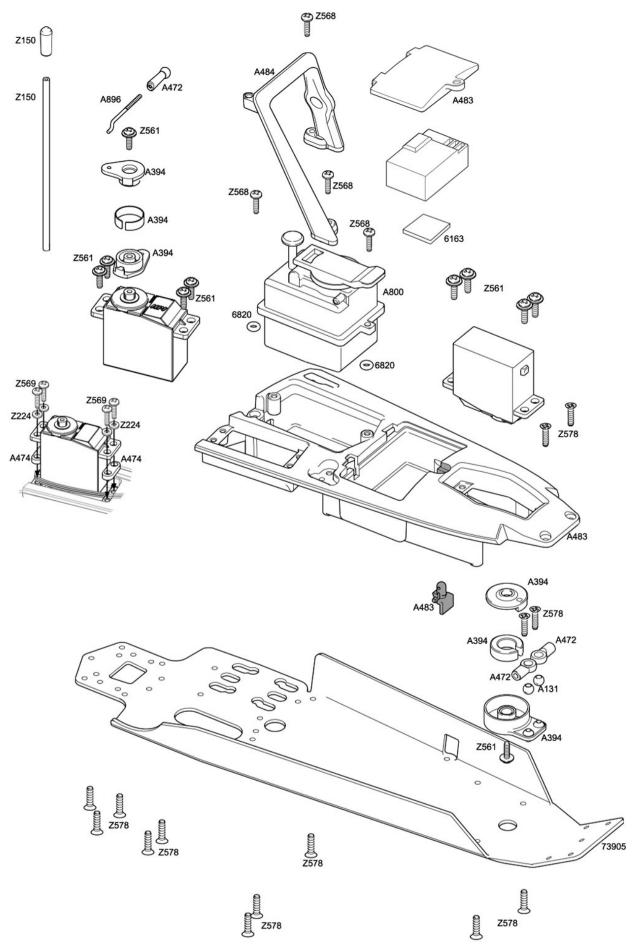

Tuning and Setup


Suspension

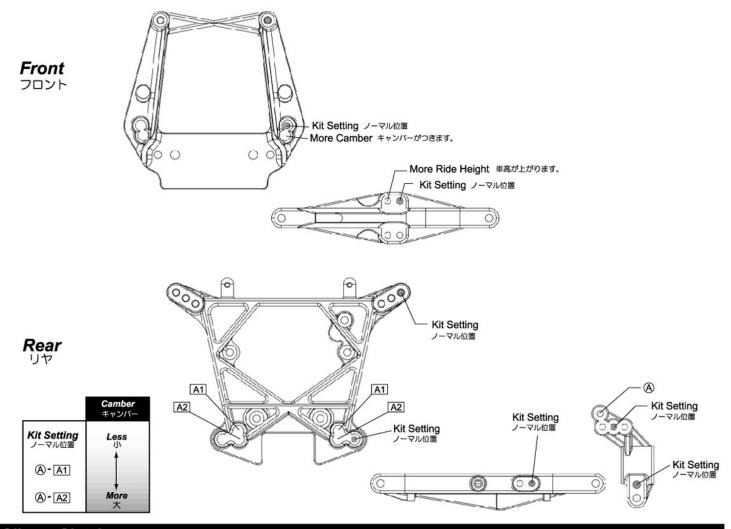

Slipper Clutch

Use this lock nut to adjust the slipping action. Do not loosen too much! If the slipper is too loose, the plastic could melt! Adjust the slipper enough so that it protects the drivetrain without melting the plastic.

スリッパークラッチの調整。 スムーズなドライビングとギヤなどの破損を最小限にします。 緩めすぎると高温になり破損の原因になります。

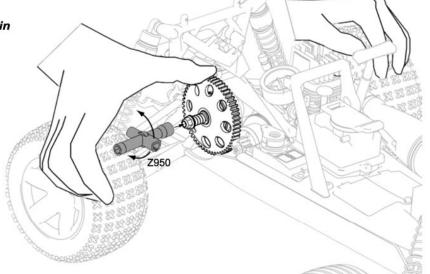





Parts List

					-	M. Calabara	
Part #	Qty	Name	Retail Price	Part #	Qty	Name	Retail Price
1615	1	Nitro Star 15FE Engine	120.00	Z526	6	Flat Head Screw M3 x 8mm	1.00
3043 3048	2	Type F5 Truck Wheel (Front/Gun Metal)	8.00 8.00	Z529 Z561	6	Flat Head Screw M3 x 15mm	2.00 2.00
4458	2	Type F5 Truck Wheel (Gun Metal) Truck X Tire M Compound 2.2 Inch	15.00	Z568	10	TP. Flanged Screw M3 x 10mm TP. Binder Head Screw M3 x 12mm	1.00
4460	2	Truck Rib Front Tire M Compound 2.2 Inch	15.00	Z569	10	TP. Binder Head Screw M3 x 15mm	1.00
50474	1	Silicone Tube 2 x 5 x 300mm	6.00	Z578	10	TP. Flat Head Screw M3 x 12mm	1.00
6122	10	Body Pin (Medium/10 pcs.)	2.00	Z593	4	Screw Shaft 3 x 27mm	2.50
6125	4	Super Star Washer Set	2.00	Z599	4	Screw Shaft 3 x 40mm	2.50
6154	10	Nylon Strap (3.5 x 150mm/Black/10 pcs.)	2.00	Z663	6	Lock Nut M3(6 pcs.)	2.50
6163	1	Servo Tape 20 x 100mm (5 pcs.)	4.00	Z684	4	Flange Lock Nut M4 (4 pcs.)	2.50
6282 6786	2	Shaft 3 x 42mm (Stainless Steel) Spring 13 x 57 x 1.1mm 9 Coils (Black/Medium)	5.00 3.50	Z693 Z694	10 10	Washer M4 x 10 x 0.8mm Silver Washer M5 x 10 x 0.5mm Silver	2.50 1.00
6796	2	Spring 70 x 14 x 1.1mm (Black/Medium)	3.50	Z700	6	Set Screw M3 x 3mm	2.00
6816	6	Silicone O-Ring S10 (6 pcs.)	2.00	Z901	1	Allen Wrench 1.5mm	1.00
6820	8	Silicone O-Ring P-3 (Clear)	2.00	Z950	1	Cross Wrench (Small)	2.00
6872	2	Shock Shaft 3 x 47 (Stainless Steel)	3.50	Z961	1	Turnbuckle Wrench (4/4.5/5.5/6mm)	2.00
6876	2	Shock Shaft 3 x 55mm (Stainless Steel)	3.50				
7175	1	Nitro Rush Body (Nitro RS2 ST)	24.00	-			
72100 72115	1 1	Shock Cap 12 x 0.8mm (Silver/Grooved) Silicone L Pipe	3.00 3.00	Set Pa	arts		
72120	1	Engine Plate	7.00	0017	.,		
72125	1	Front Arm Brace 54mm	3.00				
72130	1	Aluminum Slipper Plate	2.00	A773	2	HPI Sport Shock Set (62 - 87) (Front)	20.00
72131	2	Slipper Clutch Pad	4.00	A775	2	HPI Sport Shock Set (70 - 103) (Rear)	20.00
72132	2	Front A x le (2 pcs.)	5.00				
72133	2	Diff Shaft (Silver)	6.00				
72135 72136	1	Gear Shaft 5 x 73mm Idler Shaft 5 x 25mm	4.00 2.00	Option	n Part	fe .	
72137	1	Spring 4 x 12 x 1.5mm 5 Coils	2.00	Орио	i i ai t		
72140	1	Air Cleaner 30mm	5.00				
72158	1	Drive Gear 21 Tooth (48 Pitch)	3.00				
73905	1	Main Chassis (Aluminum T2.0mm Purple)	35.00	2100	2	Super Star Mt Wheels White Front	7.50
76906	1	Spur Gear 56 Tooth (1M)	6.00	2105	2	Super Star Mt Wheels Black Front	7.50
93342	2	Turnbuckle 4-40 x 90mm (2 pcs.)	6.00	2125	2	S.S. Truck Wheels Front Chrome	9.50
A096 A131	2	Front Spring 0.7mm Ball 3 x 5.8 x 4.5mm	4.00 2.00	2130 2135	2	S.S. Truck Wheels Front Gold Super Star Mt Wheels White (Rear)	9.50 8.50
A133	4	Ball 5.8 x 6mm	4.00	2140	2	Super Star Mt Wheels Black (Rear)	8.50
A249	4	Ball M2 x 3.8 x 4.5mm	5.00	2160	2	Super Star Mt Wheels Chrome (Rear)	9.50
A344	1	Gear Box Case	5.00	2165	2	Super Star Mt Wheels Gold (Rear)	9.50
A345	1	Suspension Mount Set	6.00	2175	2	S.S.Mt Wheels Chrome Front	9.50
A349	1	Bumper Set	7.00	2180	2	1/10 S/S Mt Wheels White Rear	8.50
A355	1	Shock Tower Set	6.00	2181	2	1/10 S/S Mt Wheels Black Rear	8.50
A394 A432	1 1	Servo Arm Set	4.00 3.00	2185 2190	2	1/10 S/S Mt Wheels Chrome Rear	9.50 7.50
A452 A459	2	Gear Set (55T/29T) Suspension Arm Set (2 pcs.)	9.00	2191	2	Mt Mesh Wheel (Front/White) Mt Mesh Wheel (Front/Black)	7.50
A472	2	Shock Parts Set	5.00	2192	2	Mt Mesh Wheel (Front/Chrome)	8.50
A474	1	Upper Tie Rod Set (Nylon)	3.00	2195	2	Mt Mesh Wheel (White)	7.50
A483	1	Upper Deck Set	14.00	2196	2	Mt Mesh Wheel (Black)	7.50
A484	1	Roll Bar Set	7.00	2197	2	Mt Mesh Wheel (Chrome)	9.50
A544	2	Shock Body Set (62-87mm)	3.50	4450	2	Truck V Groove Tire Pro Compound 2.2	17.99
A546	2	Shock Body Set (70-103mm)	3.50	4451	2	Truck V Groove Tire M Compound 2.2"	13.00
A549 A554	2	Axle 5 x 40mm (Rear) Dogbones 6 x 86mm	5.50 6.00	4455 6784	2	Dirt Hawg M2 Compound Tire Spring 13 x 57 x 1.1mm 10 Coils (Yellow/Soft)	18.00 5.00
A800	1	Gas Tank Set	14.00	6788	2	Spring 13 x 57 x 1.1mm 10 Coils (Tellow/Soft) Spring 13 x 57 x 1.2mm 9.5 Coils (Blue/Firm)	5.00
A805	i	Pilot Shaft M5	3.50	6794	2	Spring 13 x 70 x 1.1mm 15 Coils (Yellow/Soft)	5.00
A813	1	Clutch Bell 13T	6.00	6798	2	Spring 13 x 70 x 1.1mm 13 Coils (Blue/Firm)	5.00
A827	2	Clutch Spring 0.7mm	1.00	6817	1	10mm Shock Parts Set	4.50
A840	1	Brake Plate Set	5.00	6818	1	10mm Pistons Teflon Set (2Set)	4.00
A850	1	Diff Bevel Gear Set	5.00	72525	1	Racing Fuel Tank 75cc	15.00
A866 A868	1	Exhaust Manifold Tuned Pipe (Composite Nylon)	7.00 10.00	A401 A519	1	Rear Hub Set Universal Dogbones (Rear)	5.00 34.00
A875	5	Exhaust Gasket	2.50	A723	2	HPI Super Shock Set (62 - 87mm)	36.00
A884	1	Flywheel (Cast)	5.00	A725	2	HPI Super Shock Set (70 - 103mm)	36.00
A886	1	Teflon Clutch Shoe Set	12.00	A811	1	Clutch Bell 11 Tooth (1M)	6.00
A890	1	Linkage Set	3.00	A812	1	Clutch Bell 12 Tooth (1M)	6.00
A896	1	Throttle Linkage Set	3.00	A814	1	Clutch Bell 14Tooth (1M)	7.00
B007	2	Ball Bearing 3/16 x 3/8 x 1/8 Inch	8.00	A815	1	Clutch Bell 15Tooth (1M)	7.00
B022	2	Ball Bearing 5 x 11 x 4mm	14.00	1044		A814 & A815 require A863 Engine Mounts	44.00
B030 B046	2 1	Ball Bearing 10 x 15 x 4mm Clutch Needle Bearing 5 x 8mm	15.00 5.80	A844 A863	1	Fiber Brake Disk Engine Mount (HPI, OS)	14.00 4.00
B072	6	Metal Bushing 5 x 11 x 4mm	1.50	A885	1	Nitro Racing Clutch	15.00
Z136	4	Ball End 4-40 (Black)	3.00	A915	2	Heat Sink Engine Mount (20mm) For Pull Starter	45.00
Z150	1	Antenna Pipe Set	1.00	A920	2	Heat Sink Engine Mount (15mm) Non-Pull Starter	45.00
Z160	1	Grease	1.50		55.0	must be used with A926, A940, & A950	
Z170	1	Silicone Shock Oil #300	3.50	A925	1	Light Weight Flywheel (40mm) For Pull Starter	20.00
Z203	10	M3 x 6mm Washer	1.00	A926	1	Light Weight Flywheel (32mm) Non-Pull Starter	18.00
Z224	10	Washer M3 x 8mm	1.00	A000	4	A925 & A926 require A804 Collet, and A926 req	
Z242 Z244	20 10	E Clip E2mm E Clip E-4	1.00 1.00	A928 A940	1	Oil Catch (Not for Nitro Star Pro Engines) Tuned Pipe (12-15)	17.00 65.00
Z244 Z264	10	Pin 2 x 10mm Silver	1.50	A940 A950	1	Exhaust Header (HPI, OS, TT, DYN)	32.00
Z285	4	Step Screw M3 x 15mm	2.00	A330		A940 & A950 require 72110 Silicone Exhaust Co	
Z509	6	Button Head Screw M3 x 30mm	2.00	A970	1	Tuned Pipe And Exhaust Header Set (HPI,OS,TT,	
Z515	6	Binder Head Screw M3 x 5mm	1.00	Z076	5	Alum. TP. Flat Head Screw M3 x 8mm (Hex /Purp	
Z516	6	Binder Head Screw M3 x 10mm	2.00	Z079	5	Alum. TP. Flat Head Screw M3 x 15mm (Hex /Pu	
Z517	10	Binder Head Screw W3 x 8mm	1.50	Z679	5	Wheel Nut M4 (Purple/5 pcs.)	6.00



