


# Instruction Manual

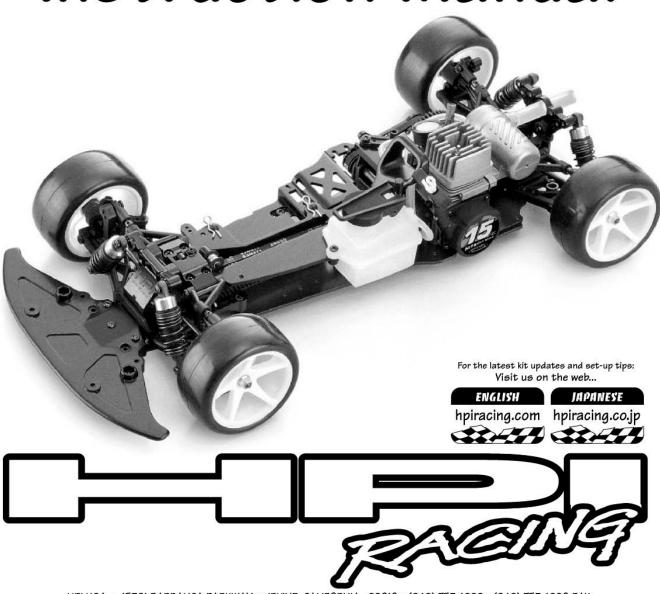


HPI USA • 15321 BARRANCA PARKWAY • IRVINE, CALIFORNIA 92618 • (949) 753-1099 • (949) 753-1098 FAX HPI JAPAN • 3-25-36 TAKAOKANISHI • HAMAMATSU-SHI, SHIZUOKA-KEN • 053-439-0833 • 053-439-0844 FAX HPI EUROPE • UNITS 1-3, QUEENS DR. IND. EST. • NEWHALL, SWADLINCOTE, DERBYSHIRE, DE11 0EG, ENGLAND • 441283229400


# **≪**Tools and Equipment

Thank you for selecting this HPI racing car! This kit is designed to be easy to build and uses top quality parts for durability and performance. The instruction manual you are reading was designed to be easy to follow yet thorough in its explanations. HPI Racing want you to enjoy both building and driving your new race car. If you come across any problems or need some help getting through a step, give us a call and we will do our very best to help you. You can also contact us on the internet at hpiracing.com.


この度はHPIレーシング製品をお買い上げ頂きまして有難うございます。この製品はトップクオリティの部品を使い、初心者にも組み立てやすく、なおかつハイレベルな走行が出来る様に設計されています。

7、10、3 いると 13 が出来 3 ではいたす。 この説明書は、初心者の方にも簡単に組み立てて頂ける様に多くのイラスト、実寸表示のイラスト等を使い説明してあります。初めてラジコンエンジンカーを 走らせる方のために、セットアップマニュアルを別に用意致しましたので、こちらの方も良く読んでから楽しいラジコンライフをスタートして下さい。 私たちHPIレーシングでは、走らせる楽しみはもちろんの事、組み立てる事の楽しみも知って頂きたいと願っています。キットの組み立ての事で、不明な 点がありましたら、どうぞお気軽に電話でお問い合わせ下さい。

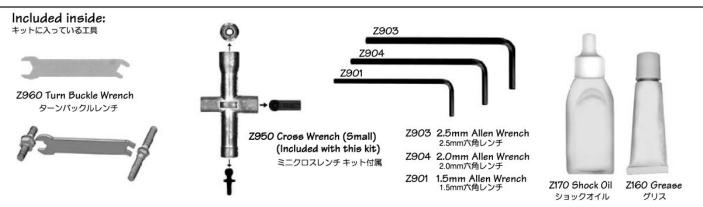

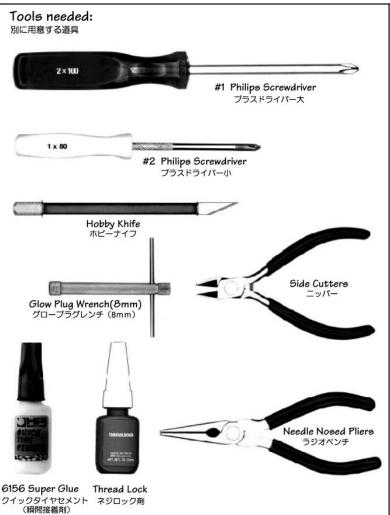

### Equipment needed:

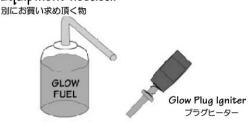


Glow Fuel グロー燃料

#### FUEL AND GLOW IGNITER

You will need glow fuel (specifically designed for model car engines) and a glow plug igniter to start the engine.

#### グロー燃料

ンー / mm-1 ナイトロRS4を走行させるためには、2 チャンネル2 サーボのプロポシステムが必要です。上記のイラストの様に受信機用バッテリーパック及び、オン/オフスイッチの付いた物が必要です。

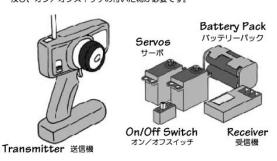

#### RADIO CONTROL SYSTEM

You will need a 2-channel radio system with two servos, an external receiver battery pack and an ON/OFF switch.

#### プロポシステム(無線装置)

ナイトロRS4を走行させるためには、グロー燃料が必要です。 多くのグロー燃料がホビーショブで販売されていますので、 適した燃料をお買い求めください。また、エンジン始動用に ブラグヒーターが必要です。





## *KObserve These Cautions!*

To prevent any serious personal injury and/or damage to property, please be responsible when operating all remote controlled models. Extra attention is called for when operating any glow fuel powered model, such as the Super Nitro R54. These models can exceed speeds of 31 mph (50km/h) and use highly poisonous and flammable fuels.

#### CHOOSE THE RIGHT PLACE TO OPERATE YOUR R/C MODEL

Never operate R/C models anywhere listed below:

- 1. On any public streets or highways this could cause serious traffic accidents, personal injuries and/or property damage.
- 2. Near people or animals never run your model anywhere using people or animals as markers or obstacles.
- 3. In hallways, alleys or any other restricted or confined areas that can cause personal injuries and/or property damage.
- 4. Anywhere where loud noises can disturb others, such as around hospitals or residential areas.
- 5. During the early morning or late night hours when visibility is limited and loud noise can disturb neighbors.
- 6. Indoors or around furniture there could be a chance of the R/C model damaging the surface or any objects in the area.

### NEVER RUN ANY TYPE OF R/C MODEL IN THE VICINITY OF HEATING DEVICES OR OPEN FLAMES

Glow fuel powered R/C models use highly flammable fuels. Do not smoke when fueling or operating a glow fuel powered R/C model, and do not run near open flames or heating devicesdoing so can cause explosions and/or serious accidents.

### OPERATE GLOW FUEL POWERED MODELS IN AN OPEN, WELL VENTILATED OUTDOOR AREA

Glow fuel powered model engines emit poisonous vapors and gasses - these vapors irritate the eyes and can be highly dangerous to your health.

#### **NEVER USE GASOLINE**

Engines used in R/C models were specifically designed for use only with approved glow fuels. Non-approved fuels such as gasoline can cause explosions and serious personal injuries and/or property damage.

#### GLOW FUEL ENGINED R/C MODEL OPERATING PROCEDURES

Follow this set of rules to prevent "runaways":

- 1. Always have the R/C model atop a box or similar platform so that the tires do not touch the ground.
- When starting, always turn on the transmitter first, then the receiver.
- 3. before fueling or starting model, double check servos, trims, throttle linkage, brake, fuel tank, fuel lines and receiver battery pack voltage. Re-adjust or replace worn or defective parts.
- 4. Fill fuel tank slowly and carefully to avoid overflowing or spilling of fuel. Wipe any excess fuel off immediately. Tightly close fuel tank cap and ensure that it's properly sealed.
- 5. We recommend you run the tank dry to turn off the engine. If you must stop before the tank is empty, properly discard the excess fuel in a safe container.
- When stopping, always turn off the receiver battery pack first, followed by the transmitter.

#### CERTAIN PARTS WILL BE VERY HOT

With any engine powered vehicle, certain engine components get very hot during operation. Never touch the cylinder cooling head, muffler, or exhaust pipe - doing so could cause burns or other personal injuries.

#### BE AWARE OF ROTATING PARTS

When the engine is running, there are certain parts that rotate at high speeds. Do not touch the drive gears, belts, drive shafts, wheels, etc. during operation-doing so could cause serious personal injuries.

#### RADIO PRECAUTIONS

Before every run, ensure that you are the only one operating on your particular frequency. Also check that the transmitter and receiver battery packs are sufficiently charged. Failure to do both could cause a loss of vehicle control and could result in serious personal injuries and/or property damage.

#### **FUEL TANK PRECAUTIONS**

Before every run, ensure that the fuel tank cap is tightly sealed. fuel leaks can cause fires or explosions. Also, never transport or store an R/C model with fuel in the fuel tank. Doing so could result in personal injuries and/or property damage.

#### GENERAL FUEL PRECAUTIONS

Glow fuels contain Methanol and Nitro Methane - both highly flammable and poisonous chemicals. Avoid contact with eyes and skin. Never use glow fuel indoors - only in well ventilated areas. Glow fuel emits harmful vapors and can be hazardous to your health. Read all warning labels and instructions prior to use. Keep all fuels chemicals away from children.

Never use glow fuels in any other engine except those designed for use with glow fuels. Also, never substitute any other type of fuel in place of glow fuels- especially gasoline. Doing so could result in explosions and serious personal injuries and/or property damage.

#### STORING GLOW FUEL

Do not store glow fuel indoors or where children can easily access it. Instead, store glow fuel in a safe, well ventilated place, away from heating devices, open flames, direct sunlight or batteries. If glow fuel spills, wipe spill immediately to prevent any fire hazards. Do not store glow fuel in any other container than that which it came in. Keep glow fuels and any other dangerous chemicals away from children.

#### IN CASE OF EMERGENCY

Glow fuels are extremely dangerous when used improperly. Here are some first aid tips when using glow fuel:

- If glow fuel is swallowed, induce vomiting and contact a physician immediately.
- 2. In case of eye contact, flush eyes thoroughly with warm (not hot) water and contact a physician immediately.
- 3. In case of skin contact, wash areas with warm (not hot) water and soap.





# **₩Parts Size Reference** パーツ原寸大

1	(			
6122 6807	Body Pin (Medium) スナップピン Shock Shaft 3 x 31mm	<b>←</b>	A553	Dogbone 6mm x57mm(Black) スイングシャフト(黒)
6813	ショックシャフト Shock Cap 12mm		A558	Diff Shaft(Black) デフシャフト(黒)
	ショックキャップ		A804a	Collet 7mm x 5mm (Gold) コレット (金色)
6814	Bladder 10 x 4mm ブラダー		A804b	Washer M7x12x0.8mm(Black) ワッシャー(黒)
6820	O-Ring P3 (Clear) シリコンO-リング		A805	Pilot Shaft M5 パイロットシャフト
6836	Front Spring 13 x29 x1.55mm スプリング			,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,
93317	Turnbuckle 4-40 x 34mm(Black) ターンバックル(黒)		A813	Clutch Bell 13T クラッチベル
93510	Turnbuckle M4 x 20mm(Black) ターンバックル(黒)			
A132	Ball 3mmx5.8mmx7mm(Black) ボール(黒)		A827	Clutch Spring 0.7mm
A180	Servo Saver Shaf(black) サーボセーバーシャフト(黒)		7,027	クラッチスプリング
A181	Servo Saver Pipe サーボセーバーバイブ		A830	Gear Shaft 5 x 64mm (Black) ギアシャフト(黒)
A182a	Servo Saver Nut サーボセーバーナット		A834	Pulley Shaft 5 x 70mm (Gray) プーリーシャフト(灰)
A182b	Spring 6 x 11 x 1.4mm スプリング	W -	A838	Flange Pipe 3 x 4.5 x 5.5mm フランジパイプ
A183	Pilot Shaft 4 x 15mm パイロットシャフト	Charles College Manager College Colleg	A840a	Brake Cam Shaft (Silver) プレーキカムシャフト(銀)
A185	Steering Joint 48mm STジョイント		A840b	Brake Plate
A281	Frange Shaft 3 x 42mm (Silver) フランジ シャフト(銀)		7,0400	プレーキブレート
A430e	Ring 10 x 3.5mm リング			
A430f	TP Binder H. Screw M2 x 10 ナベ タッピングネジ		A850a	Diff Bevel Gear 13T ベベルギヤー
A520	Arm Brace 40mm (Black) アームブレース(無)		А850Ь	Diff Bevel Gear 10T ベベルギヤー
A548	Front Axle 5x35mm		A850c	Shaft 3 x 22mm (Silver) シャフト(銀)
A549	アクスル Rear Axle 5x40mm アクスル		A850d	Washer M7 x 15 x 0.1mm (Silver) ワッシャー(銀)






			C	Z242	E-Clip E2
					Eリング
A870c	Gasket 20 x 30mm		E	Z243	E-Clip E3 Eリング
	ガスケット		C	Z244	E-Clip E4 Eリング
		40000	_	Z253	Spring Pin 2 x 10mm(Black) スプリングピン(黒)
		All Marie Day		Z264	Pin 2 x 10mm(Silver)
A870d	Restrictor 30mm		3=====	Z505	ピン(銀) Button Head Screw M3 x 15mm ナペ ネジ(銀)
	リストリクター		<del></del>	Z509	Button Head Screw M3 x 30mm ナベ ネジ
A870e	Button Head Screw M3 x 55mm			Z517	Binder Head Screw M3 x 8mm バインドネジ
A875	ナベ ネジ Exhaust Gasket		>=	Z526	Flat Head Screw M3 x 8mm サラネジ(銀)
	エキゾーストガスケット			Z529	Flat Head Screw M3 x 15mm サラタッピングネジ
A890a	Throttle Linkage Spring スプリング	WWW.Www.		Z543	Cap Head Screw M3 x 10mm キャップネジ
A890b	Throttle Linkage Rod リンゲージロッド		_	Z561	TP. Flanged screw M3 x 10mm フランジタッピングスクリュー
A890c	Brake Linkage Rod ブレーキロッド				
A890d	Brake Arm ブレーキアーム		<b></b>	Z567	TP Binder Head Screw M3 x 10mm バインドタッピングネジ
A895	Stopper		<b>(</b>	Z568	TP Binder Head Screw M3 x 12mm バインドタッピングネジ
A898	ストッパー Pivot 2.5mm	_	<b>6</b>	Z569	TP Binder Head Screw M3 x 15mm バインドタッピングネジ
7,000	ピポット	0-	<b></b>	Z578	TP Flat Head Screw M3 x 12mm
B017	Ball Bearing 4 x 8 x 3mm ベアリング	0		Z581	サラタッピングネジ TP Flat Head Screw M3 x 18mm
				2501	サラ タッピング ネジ
B022	Ball Bearing 5 x 11 x 4mm ベアリング	<b>(</b> )	9	Z593	Screw Shaft 3 x 27mm スクリューシャフト
8030	Ball Bearing 10 x 15 x 4mm		<del></del>	Z599	Screw Shaft 3 x 40mm スクリューシャフト
ВОЗО	ベアリング		0	Z653	Nut M3 ナット
B046	Clutch Needle Bearing 5 x 8mm		_		
	クラッチニードルベアリング	_	0	Z684	Flange Lock Nut M4 フランジナイロンナット
Z125	Ball Cup ボールキャップ		0	Z694	Washer M5 x10 x 0.5mm(Silver) ワッシャー(銀)
Z136	Ball 4-40(Black) ポール(黒)	-		Z700	Set Screw M3 x 3mm
		_		-	セットスクリュー
Z224	Washer M3 x 8mm(Black) ワッシャー(黒)	0		Z725	Set Screw M4 x 10 セットスクリュー







Do not throw away any pieces that you cut from the trees until after the kit is assembled.

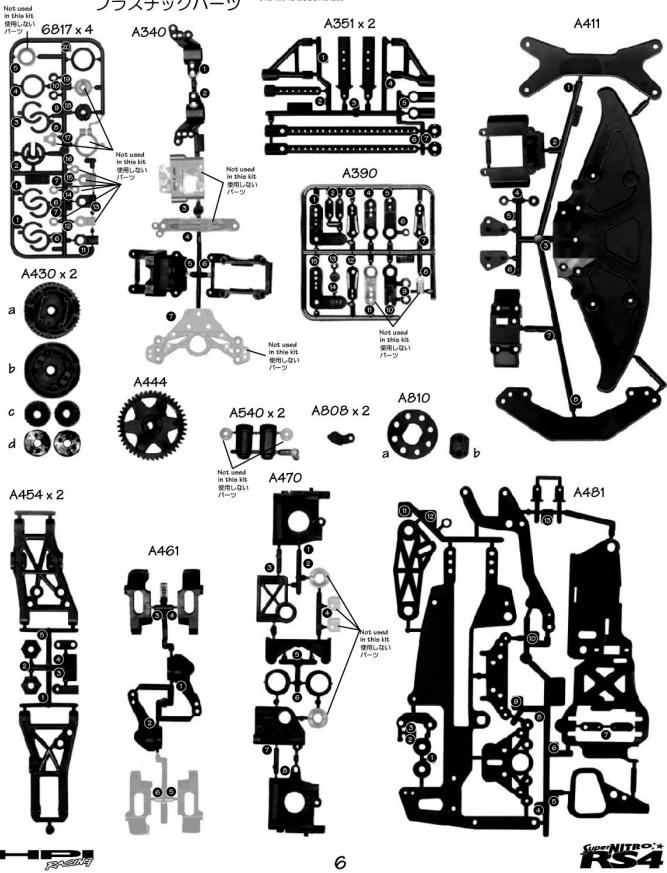

## SELECT WHEEL BASE ホイールベースの選択

280mm wheelbase features quick steering for sports cars.


280mmはスポーツカーなど クイックなステアリング特性



300mm wheelbase features stable steering for touring cars and trucks.

300mmはツーリングカー、トラック など安定したステアリング特性

▼ PLEASE NOTE : The 280mm and 300mm have different instructions. ホイールベースにより、組み立て方が異なりますので注意して下さい。

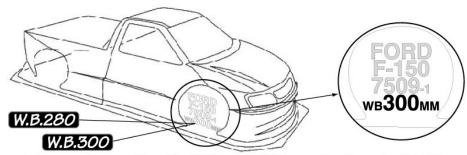


You can choose either the 280mm or 300mm wheelbase for this kit. このキットのホイールベースは280mm、300mmの2通りの選択が可能です。 ご使用になるボディに合わせてお選び下さい。


## OPEN BAG A/E/F




93510 Turnbuckle M4-40 x 34mm(Black) x 2 ターンバックル (黒)

Make two rear upper arms. 2セットリアアッパーアームを作ります。

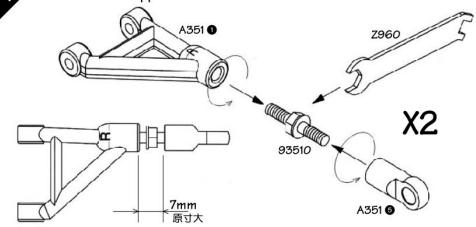

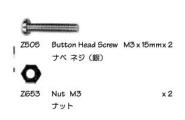

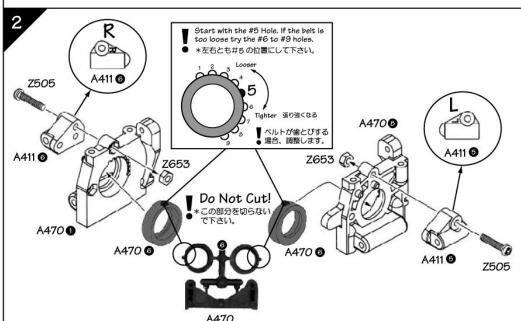





スクリューシャフト

Screw Shaft 3 x 40mm スクリューシャフト

A132 Ball 3mmx5.8mmx7mm(Black) x 2 ポール (黒)

A430e Ring 10 x 3.5mm x 4 リング

A430f TP Binder H. Screw M2 x 10 ナベ タッピングネジ

Diff Shaft(Black) A558 x 4 デフシャフト (黒)



A850a Diff Bevel Gear 13T x4 ベベルギヤー



A850b Diff Bevel Gear 10T ベベルギヤー

A850c Shaft 3 x 22mm (Silver) x 2 シャフト (銀)




 
A850d Washer M7 x 15 x 0.1mm (Silver)x 4 ワッシャー(銀)


C

E-Clip E2 x4 Eリング



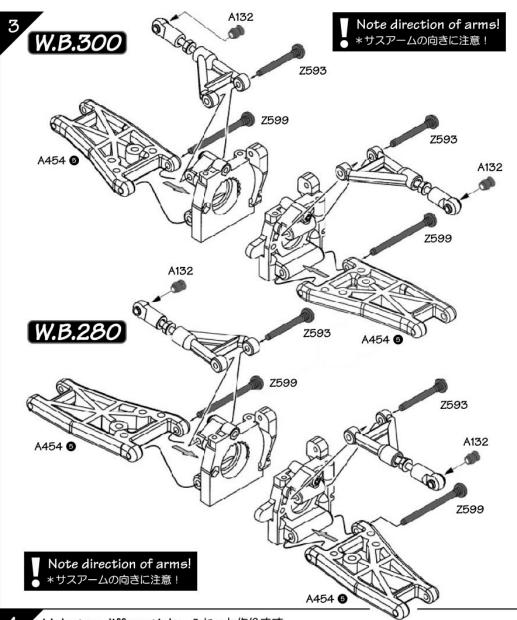




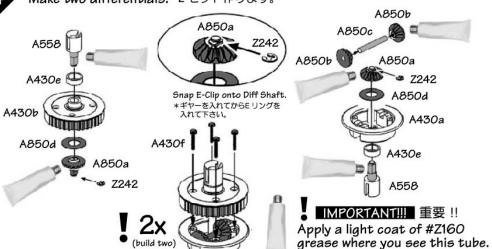

薄くグリスを付けます。

 8





B030 Ball Bearing 10 x 15 x 4mm x 2 ペアリング

Z578 TP Flat Head Screw M3 x 12mmx 4 サラタッピングネジ

# 6

A430c 18T Diff Pulley x2 プーリー x2 A430d 18T Diff Pulley Guide x2 プーリー x1 スパーギアー x1

A810b Brake Hub x1 プレーキハブ A810a Brake Disk x1 プレーキディスク





A840b Brake Plate x2 プレーキプレート



B022 Ball Bearing 5 x 11 x 4mm x 1 ペアリング





Z264 Pin 2 x10mm(Silver) x 4 ピン (銀)

1

Z505 Button Head Screw M3 x 15mm x 2 ナベ ネジ (銀)



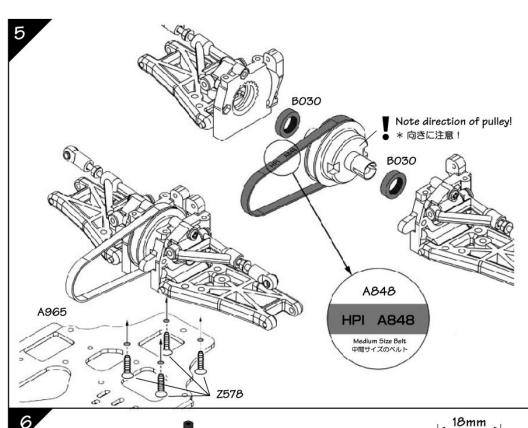

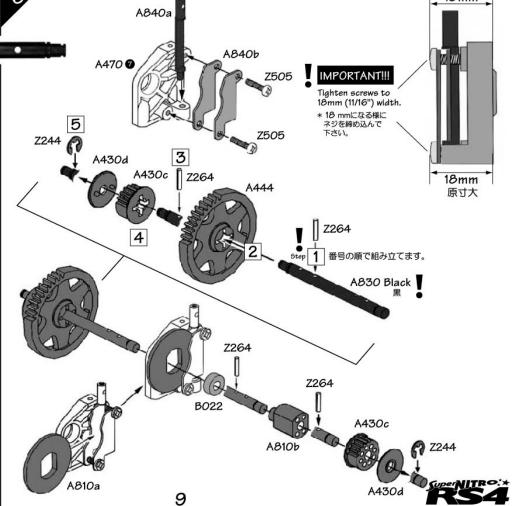



BO22 Ball Bearing 5 x 11 x 4mm ペアリング

**J** 

Z567 TP Binder Head Screw M3 x 10mm x 1 バインドタッピングネジ

Z578 TP Flat Head Screw M3 x 12mm x 4 サラタッピングネジ




A183 Pilot Shaft 4 x 15mm パイロットシャフト

A430c 18T Diff Pulley × 2 プーリー

x 2

x 1

A430d 18T Diff Pulley Guide プーリー

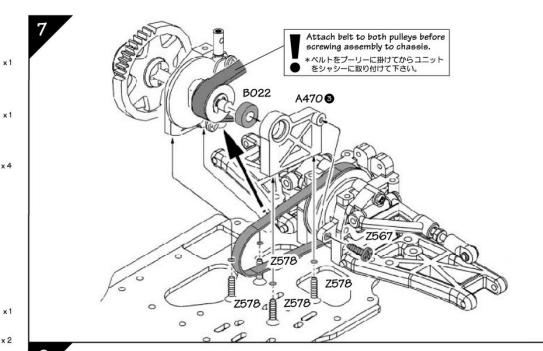

A834 Pulley Shaft 5mm x 70mm (Gray) x 1 ブーリーシャフト(グレー)

A847 Belt 53M 162 (54T) x ベルト



BO17 Ball Bearing 4 x 8 x 3mm x 4 ベアリング



BO22 Ball Bearing 5 x 11 x 4mm x 2 ペアリング



Z224 Washer M3 x 8mm (Black) x1 ワッシャー(黒)

Z242

E-Clip E2 Eリング



Z243 E-Clip E3 x 2 Eリング



Z244 E-Clip E4 x 2 Eリング

Z264 Pin 2 x 10mm (Silver) x 2 ピン (銀)





Z517 Binder Head Screw M3 x 8mm x 1 パインドネジ

### -

Z578 TP Flat Head Screw M3 x 12mm x 3 サラタッピングネジ



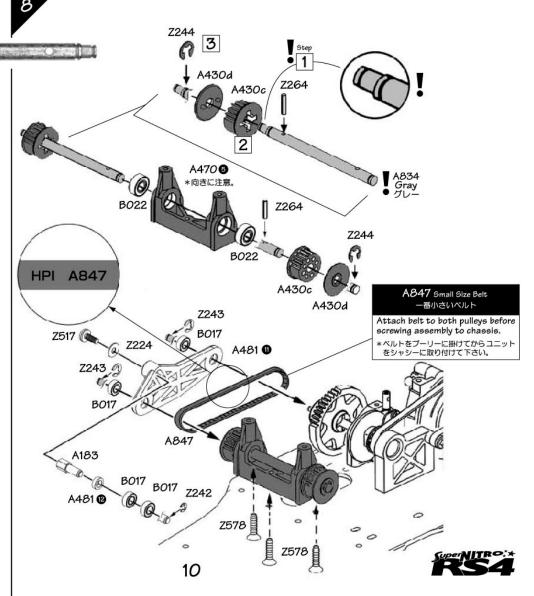

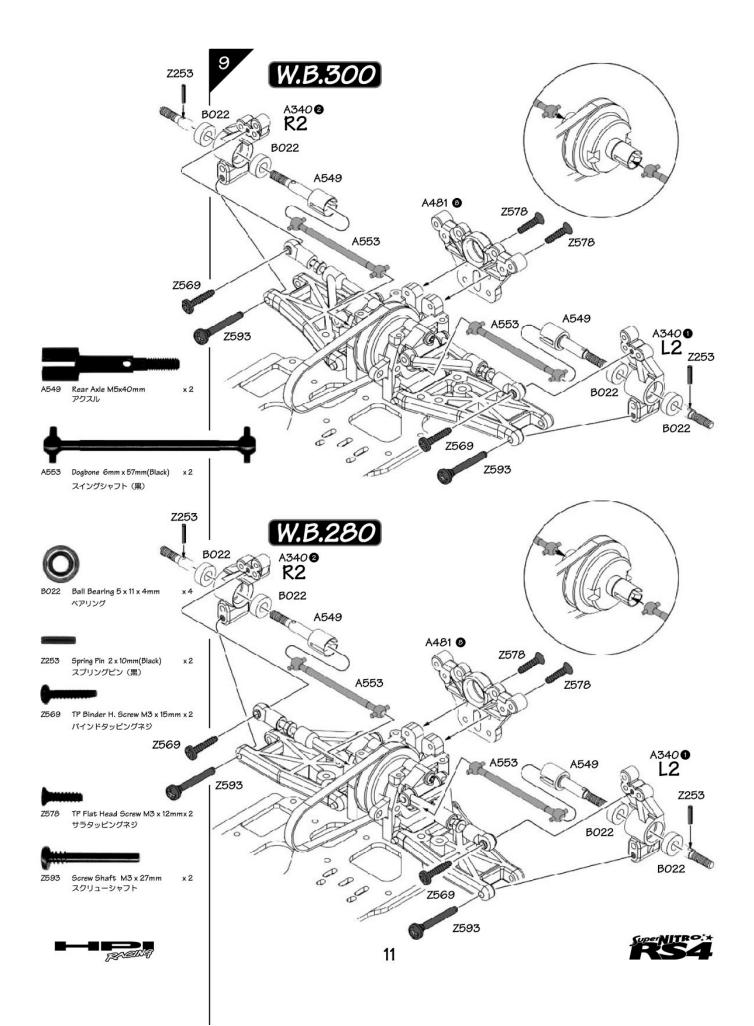





A181

Servo Saver Pipe サーポセーバーパイプ

x 1

x 1

x 1

x 1



A182a Servo Saver Nut サーポセーバーナット



Spring 6 x 11 x 1.4mm スプリング A182b x 1



Ball 4-40 (Black) x 3 ポール 黒



93317 Turnbuckle 4-40 x 34mm(Black) x 2 ターンバックル(黒)



Z125 Ball Cup ボールキャップ



Servo Saver Shaft サーポセーバーシャフト A180



A183 Pilot Shaft 4 x 15mm パイロットシャフト

A185 Steering Joint 48mm STジョイント


Belt S3M 471 (157T) ベルト


C Z242


E-Clip E2 (Silver) x 2 E リング 銀色

Z526 Flat Head Screw M3 x 8mm x 2


サラネジ

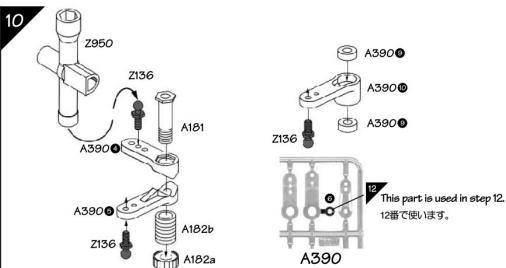


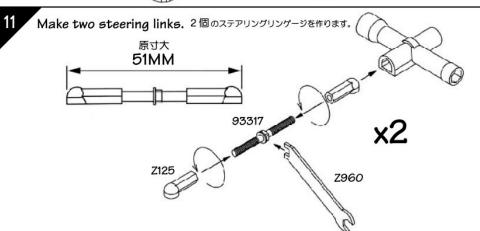

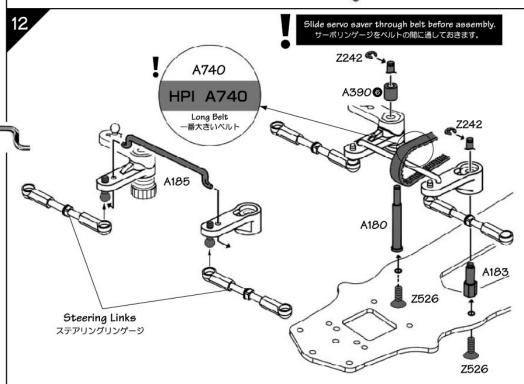




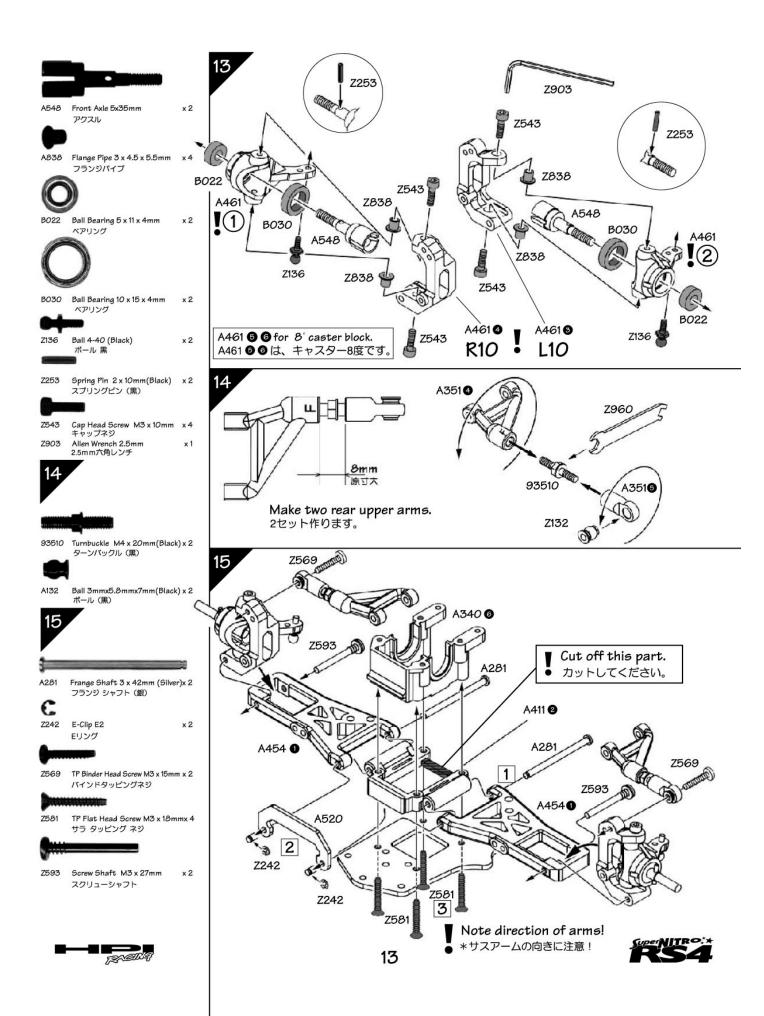


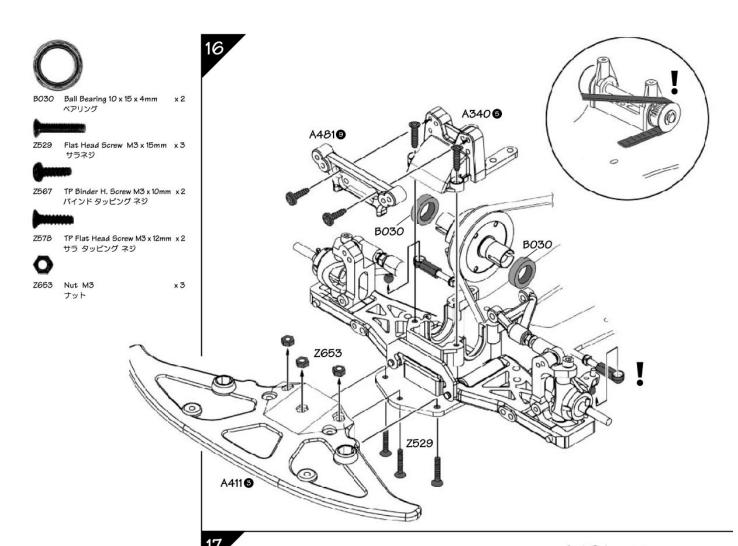



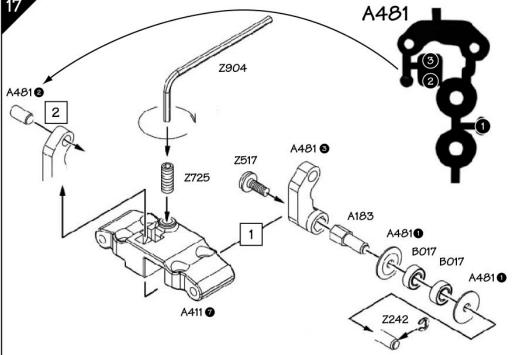



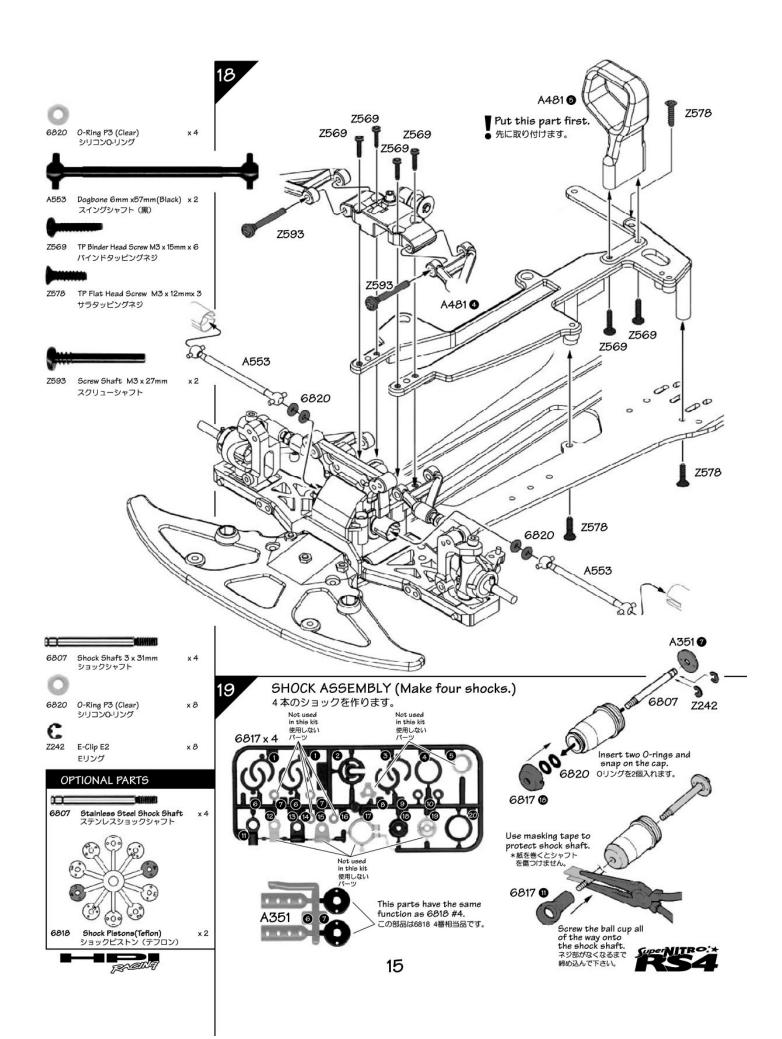







ショックオイル




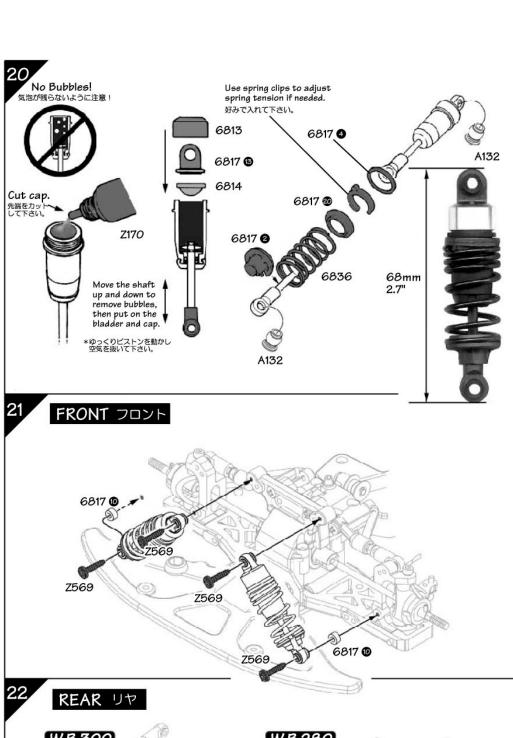

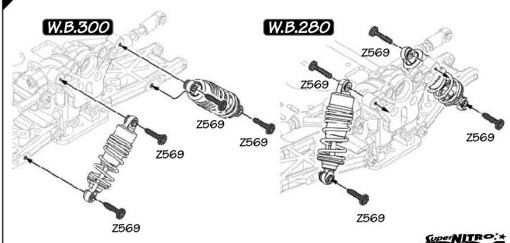

16



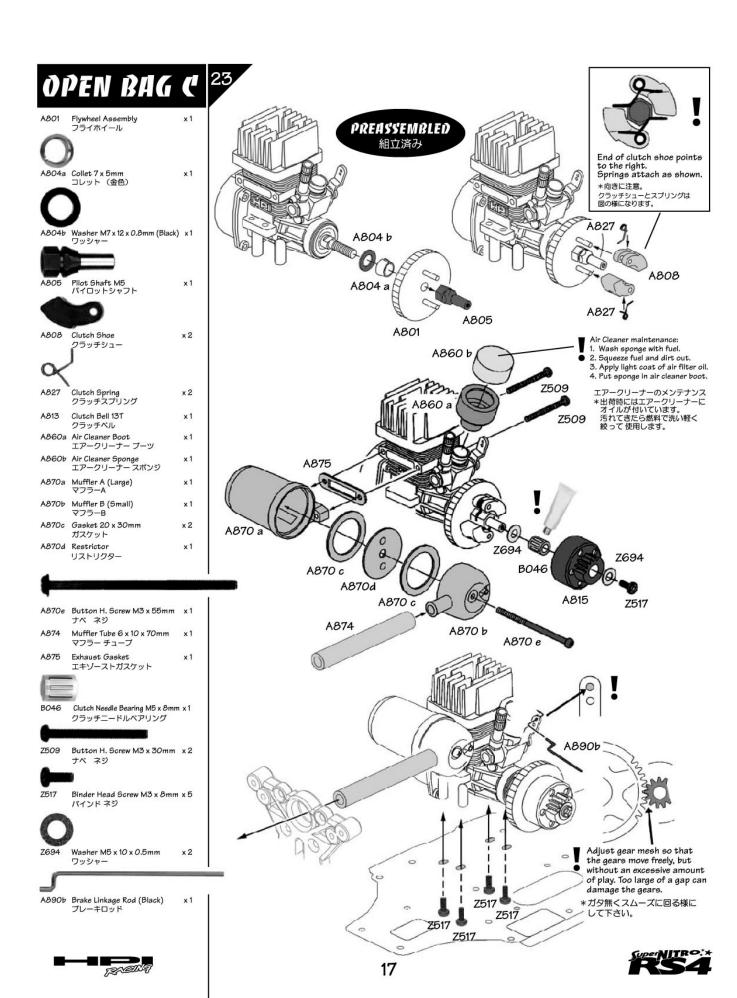

# OPEN BAG D 24

**J**mm

Z567 TP Binder Head Screw M3 x 10mm x 3 パインドタッピングネジ

**J**------

Z569 TP Binder Head Screw M3 x 15mm x1 バインドタッピングネジ Z567 Z567 Z567 Z567

6228 Nylon Strap 7 x 250mm (Black) x1 ナイロンストラップ



93317 Turnbuckle M4-40 x 34mm(Black) x 1 ターンバックル(黒)




ボール (黒)

Z136 Ball 4-40 (Black) x1



Z561 TP. Flanged screw M3 x 10mm x 2 フランジタッピングスクリュー

Z578 TP Flat Head Screw M3 x 12mmx 1 サラタッピングネジ

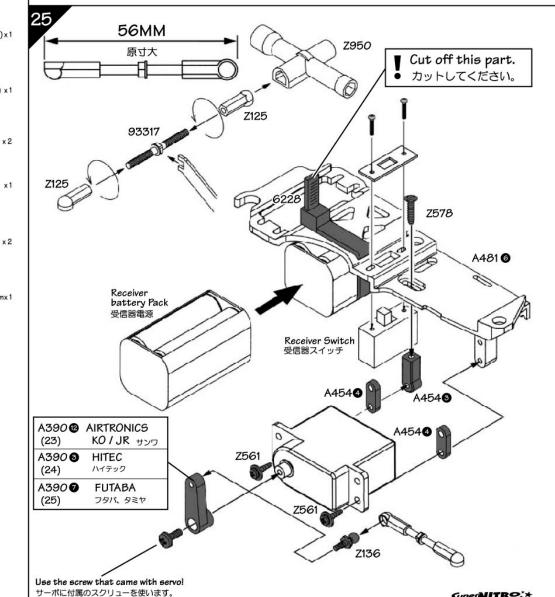


18






Z561 TP. Flanged screw M3 x 10mm x 4 フランジタッピングスクリュー

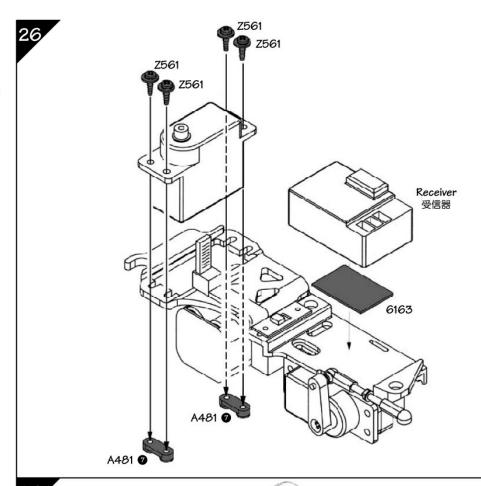




6122 Body Pin (Medium) スナップピン x 2

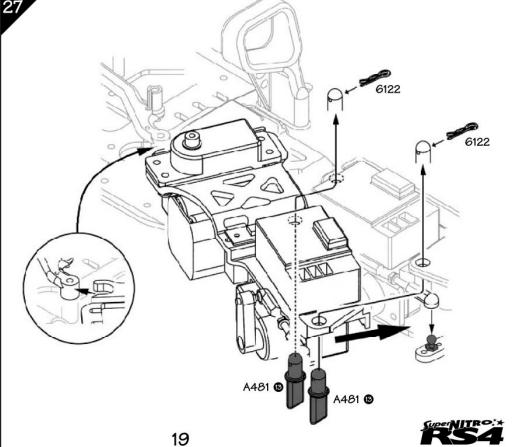



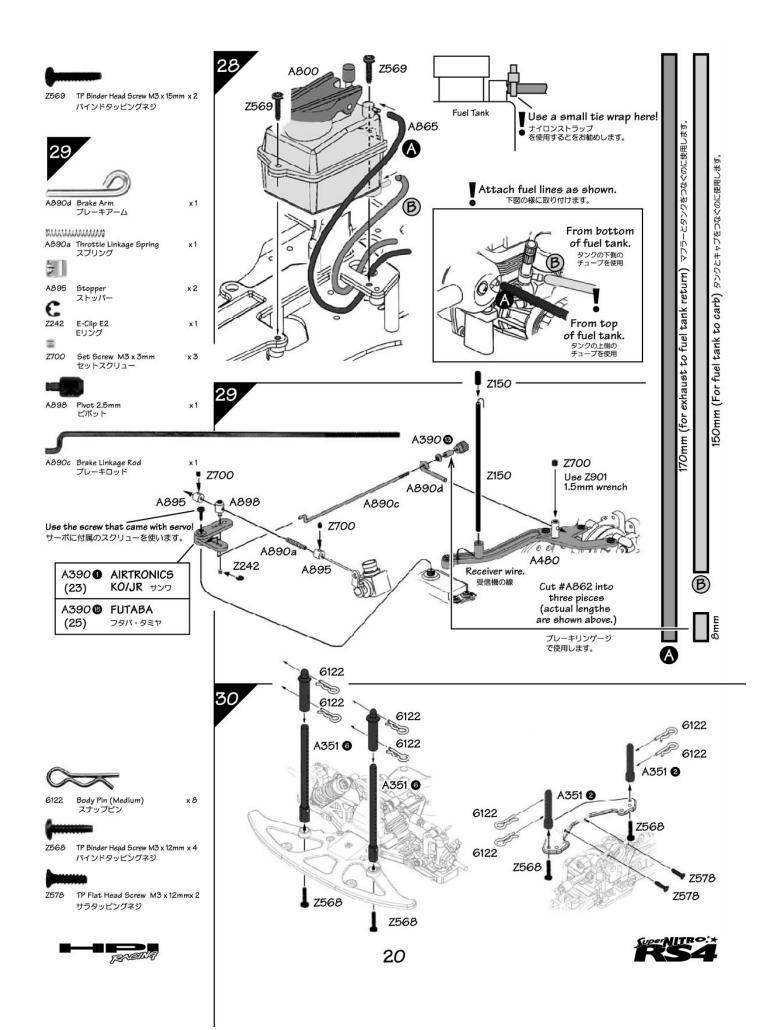



Z684 Flange Lock Nut M4 フランジナイロンナット 31 3033 REAR リヤ 4690 A454 ② A454 ② A454 ② A454 ② A590 A7セホイールの間に 瞬間接着剤を流し込みます。




### OPTIONAL

Optional Body Mount For Tamiya Bodies. 他社などのボディを使用する時に使います。



Z568 TP Binder Head Screw M3 x 12mm x 2 パインドタッピングネジ

Z578 TP Flat Head Screw M3 x 12mmx 2 サラタッピングネジ

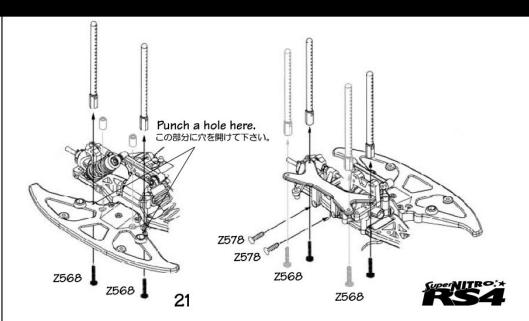




# **K** Throttle Linkage Set-Up スロットルリンケージセットアップ

### SETTING NEUTRAL

- 1. Turn on transmitter.
- 2. Turn on receiver.
- 3. Center throttle trims.
- 4. Adjust idle screw (A) so there is a 1mm carb opening.
- 5. Adjust throttle collar (B) so that the carb is set at neutral.
- 6. Adjust throttle collar (C) so throttle return spring (D) has light tension.
- 7. Turn the brake adjustment dial (E) until there is a 0.5mm gap between the brake arm and the adjustment dial.
- 1.送信機のスイッチをON にします。
- 2.受信機のスイッチをONにします。
- 3.スロットルのトリムを中心位置に しておきます。
- 4. キャプレターの口が 1 mmの隙間に
- なる様にネジで調整します。 5.(B)のストッパーのネジを緩めてピ ボットにぴったり当たる様に取り 付けます。
- 6.(C) のストッパーのネジを緩めて(D) のスプリングが 1 mm縮む位の位置 に取り付けます。
- 7.(E)のダイヤルを回して隙間を 0.5 mm 開けて下さい。

### NOTE: Make adjustments with the engine off!

\*エンジンは止めた状態でセットして下さい。

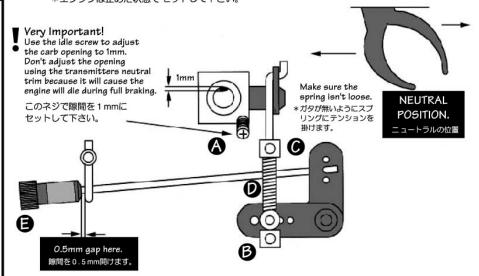

#### SETTING FULL THROTTLE

#### WITH ENGINE OFF:

- 1. Pull full throttle.
- 2. Adjust throttle end point adjustment (TH-EPA) so that the throttle servo stops when the carb is fully open.
- 3. Make sure there is no binding in throttle linkage during movement.

#### 全開時のセット

- 1.スロットルトリガーを全開位置にします。
- 2.キャブレターの穴が全部開く様にします。 全部開かなかったり開き過ぎる場合は、 ピポットの位置を変えて下さい。 又、送信機にスロットルエンドポイント アジャスト機能が付いている場合はそち らを使用します。
- 3.各部の動きに無理がかからない様にして

### FULLY OPEN . 全部開くのを確認します。 FULL THROTTLE POSITION. 全開の位置 Servo movement at full throttle. サーポストローク 最大位置


#### SETTING FULL BRAKE

#### WITH ENGINE OFF:

- 1. Push trigger to full brake position.
- 2. Adjust throttle end point adjustment (TH-EPA) so that the throttle servo stops when the brake plates compress the brake disk.
- 3. Make sure there is no binding in throttle linkage during movement.

#### ブレーキ時のセット

- 1.スロットルトリガーをブレーキ位置にします。
- 2.プレーキがしっかり効く様にします。 効かなかったり効き過ぎる場合は、 サーボホーン側の穴位置を変えて下さい。 又、送信機にスロットルエンドポイント アジャスト機能が付いている場合はそち らを使用します。
- 3.各部の動きに無理がかからない様にして 下さい。

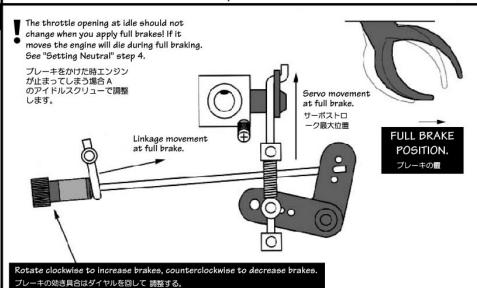





## Starting For The First Time. エンジンスタート

Let's get ready! First, read the instructions for your radio completely. If you lose control due to radio problems it will damage the car and motor. Install fresh batteries in transmitter and receiver pack. Extend radio and receiver antennas.

走行(エンジン始動)方法

送信機、受信機の順番でアンテナを伸ばし、スイッチを入れて下さい。 キャブレターが アイドリング状態 (スローの位置) になっているか 確認して下さい。

#### **TURN ON RADIO**. 電源の入れ方

- 1. Switch on transmitter
- 2. Switch on receiver.
- 3. Make sure servos function properly.
- 4. Check the range of radio by walking away from car.
- 1. 送信機をONにします。
- 2. 受信機をONにします。
- キャプレターがアイド リング状態になってい るか確認して下さい。

Always turn on transmitter first! 送信機をONに します。



Turn on receiver first, then transmitter. 受信機をONにします。

Let's fill up the fuel tank. Make sure you buy good quality fuel. Low priced fuel has less lubrication and less cooling ability. New engines are the easiest to damage from low quality fuel! Follow the engine manufacturers recommendations for fuel requirements and break-in proceedures. 各社エンジン取扱説明書をよくお読み下さい。 ニードルの調整等確かめた上初めて下さい。

Never use fuel near a heat source or near open flames!

燃料は引火性が強いので、火気のある所や高温な場所での 給油はお避け下さい。

It's time to force the fuel through the fuel lines to the carburetor. Watch the bubbles in the fuel tubing while pushing the primer button to see when the fuel reaches the carburetor.

#### NOTE:

Do not over-prime

the carb. Doing so will flood the carburettor! となり、エンジンが始動しません。

燃料が入り過ぎますとオーバーチョーク

### FUEL FILLING.

- 1. Fill tank with high quality glow fuel.
- 2. Close cap securely after filling.





Make sure that the throttle valve is in the neutral position!

\*キャブレターがアイドリング 状態になっているか確認して 下さい。

#### PRIMING CARB.

- 1. Push fuel primer button a few times until fuel reaches throttle inlet.
- 2. Press button two more times to allow fuel to enter throttle valve.

給油

- 2. 燃料がキャプレターの入り口まできましたらあと1~2回ボタンを押して下さい。



Raise the car so that wheels are not touching the ground. Attach glow plug heater and pull recoil starter several times quickly. Don't pull the cord all of the way out!

送信機のスロットルトリムを3コマ程上げておきますと、エンジンが 始動しやすくなります。

High RPM during the break-in period and/or pulling the recoil starter cord beyond 40cm can damage the engine.

プルスターターのコードは、40cm以上引きますと破損する 場合が有りますのでご注意下さい。

If there is too much fuel inside the cylinder the engine will not start; this is called "over-primed". To fix this problem, follow these instructions.

NOTE: Make sure that the opening to the cylinder is pointed away from you or anyone else. Be careful, fuel will spray out from the cylinder!

エンジンの中に燃料を送りこみ過ぎた場合、エンジンがスタートしません。これをオーパーチョークと言います。次の手順で、オーパーチョークを直します。 注意!周りの人に燃料がかからない様に声をかけてから始めて下さい。燃料が、シリンダーヘッドから吹き出しますので目を近

#### STARTING ENGINE. エンジンの始動 1. Attach glow plug heater.

- 2. Pull recoil starter using quick, short strokes.
- 3. Open throttle valve halfway.
- 1. ブースターコードをプラグにつなぎます。
- 2 プルスターターを引きます。
- 3. スロットルを中程上げて回転を安定させます。


#### NOTE:

Make sure there are no obstructions blocking the muffler, air cleaner, or rotating parts (spur gear, clutch bell, etc.).

### OVER-PRIMED. オーバーチョーク

- 1. Remove glow plug from the engine using a glow plug wrench. .
- 2. Pull recoil starter until all of the fuel is removed from the cylinder. Wipe any fuel spills immediately. Avoid contact with skin or eyes.

1.プラグレンチでプラグをはずします。 2.プルスターターをシリンダーヘッドから燃料が出なくなるまで 何度か引きます。吹き出た燃料はすぐに布きれで拭いて下さい。 皮膚に燃料がからない様に十分注意して下さい。

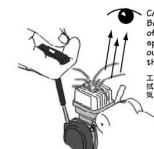

CAUTION! Be careful of fuel spraying the cylinder!

エンジン内から 拭き出る燃料に 気をつけて下さい。

We recommend driving the car until the tank is empty.

Here are three other ways to stop the engine:

- 1. Cover air cleaner intake with your finger
- 2. Restrict exhaust by pinching the muffler pipe. 3. Cut fuel supply by pinching the fuel lines.

NOTE: Be careful when stopping engine! Do not touch engine, or muffler, they may be very hot.

STOPPING ENGINE. エンジンの止め方

- 1. Run until fuel is depleted.
- 2. Restrict airflow to and from engine.
- 1.エアークリーナーを指で塞ぎます。 2.マフラーの排気パイプを曲げて塞ぎます。

エンジンを止める時は、マフラーの排気パイプを塞ぐ(高熱部分ですので 手袋等をして折曲げる)かエアークリーナーを外し、キャプレターのスロットル部分をふさいで下さい。

\*高熱部分ですので手袋等をして下さい。



Pinch muffler pipe to restrict exhaust.

Cover air cleaner to restrict intake. エアークリーナ ーを指で塞ぐ。



### ENGINE BREAK-IN AND TUNING エンジンのブレークインと調整

#### BREAK-IN THE NEW ENGINE BEFORE DRIVING THE CAR!

Perform the following static break-in to prevent damage to your new engine.

- 1. Choose a well ventilated outdoor area free from dust and set the car on top of a box so that all the wheels are off the ground.
- 2. Fill fuel tank and start engine (see page 23).
- 3. Let engine idle until it runs out of fuel. When the engine stops, allow it to cool then repeat step #2 one more time.
- 4. Fill fuel tank and run the car slowly, checking that the steering and throttle work correctly. Stay in the low and midrange speeds. NEVER use full throttle during break-in. Repeat this process for 3 to 4 tanks, allowing engine to cool down before refueling.


(ならし運転) エンジンのブレークイン

エンジンのかけ方については、別紙の"エンジンRCカーを楽しく走らせる


ために"を読んで下さい。ここでは、エンジン始動後の調節について記します。


1.車をタイヤが浮いた状態になるように台を乗せてエンジンを始動させ、アイドリング状態で、


2.次にゆっくりと走行しながら燃料を3タンク分、ブレークインを行います。

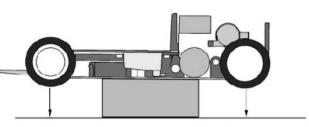

  Keep the wheels off the ground during static break-in! \*車をタイヤが 浮いた状態になるように台に乗せて下さい。 \*フルスロットルにしないで下さい。エンジンが破損する恐れが有ります。



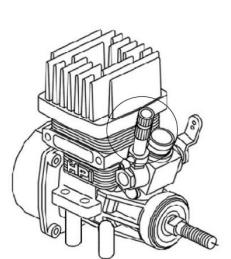




#### (A) Needle valve starting position:

Turn clockwise until it stops (closed). Turn counterclockwise 3 turns (open).

#### ニードル基準位置

 - 杯に締め込んだ状態から3回転の位置が基準位置です。 \*出荷時には、3回転の位置でセットされています。 \*使用燃料、気温、湿度によって調整が必要な時があります。




#### (B) Low top end, slow response:

Turn 2 clicks clockwise (close). Continue 2 clicks at a time until response is sharp and speeds are higher.

スピードを上げたい時

 2 コマごと締め込んでいきます。



### (C) Rough at full throttle:

Turn 1/4 counterclockwise (open). Continue 1/4 turn at a time until full throttle is smooth and responsive.

フルスロットルで止まりそうになる時 1/4戻します。



#### (D) Adjusting idle:

Turning clockwise increases idle RPM. Counterclockwise decreases RPM. Adjust to highest RPM possible without the clutch engaging and the wheels turning.

アイドリング調整ネジ

\*ニードルの調整が終わってから行って下さい。 \*右に回すと回転が上がり、左に回すと回転が下がります。

#### TUNING AFTER BREAK-IN.

- 1. Set needle valve to starting position (A).
- 2. Fill fuel tank and start engine (see page 23).
- 3. Run car to test the throttle response.
- 4. If throttle response is sluggish and top speeds are slow, close needle valve in graduations (B). If response is good, but at top speed the engine runs rough, open needle valve (C).
- 8. After needle valve tuning is complete, adjust the idlescrew (D) until idle is smooth.

NOTE: The engine should always emit blue exhaust smoke. If there is no smoke, the engine is too lean and could easily be damaged.

最高回転数を変えたい時は、ニードルで調節します。スピードを上げたい時は、ニードルバルブを右へ2~3コマすつ回していきます。 またフルスロットルで止まりそうになる時は、左に回していって下さい。

ニードルは、一杯に締め込んだ状態から2回転の位置より締め込みますと、エンジンが破損する恐れが有ります。出荷時には、3回転の位置でセット されています。低回転数を変えたい時はアイドリング調節ネジによりセットします。アイドリング時でエンジンが止まってしまう時は、ネジを右に回して下さい。 右に回すと回転数が上がり、左に回すと回転が下がります。





# **≪**Troubleshooting Guide

PROBLEM	CAUSE	SOLUTION
	Fuel tank is empty or throttle valve is not primed.	Fill fuel tank with fuel and prime throttle.
	Bad glow plug or dead plug booster battery.	Replace glow plug and recharge or replace battery.
THEINT DOTE NOT START	Fuel lines, air cleaner, or muffler is clogged.	Clean or replace clogged part(s).
ENGINE DOES NOT START.	Engine is flooded due to over-priming.	Remove glow plug and discharge fuel. Also test glow plug-replace if defective.
	Throttle valve not adjusted properly.	Set idle and needle valve to standard starting position.
	Servo linkage not adjusted properly.	Move servo to neutral then re-adjust.
	Fuel tank is empty.	Fill fuel tank with fuel.
ENGINE STARTS BUT	Fuel lines, air cleaner, or muffler is clogged.	Clean or replace clogged part(s).
THEN STALLS.	Throttle valve not adjusted properly.	Re-adjust idle and needle valve.
	Engine is overheated.	Allow engine to thoroughly cool down and open needle valve 2 to 3 clicks.
BAD REACTION AND	Throttle valve not adjusted properly.	Re-adjust needle valve.
RESPONSE FROM ENGINE.	Low fuel pressure from muffler.	Properly install pressure line from muffler to fuel tank.
	Weak transmitter and/or receiver batteries.	Recharge or replace batteries.
CAR IS HARD TO CONTROL.	Low reception from radio antennas.	Fully extend transmitter and receiver antennas.
	Servo linkage not adjusted properly.	Move servo to neutral then re-adjust.

## トラブルシューティーング


症状	原因	調べる箇所と直し方
	燃料が入っていない。燃料がエンジンまで来ていない。	燃料タンクに燃料を入れ、エンジンまで燃料を送る。(チョーク)
	ブラグが切れている。ブラグヒート用電池が減っている。	ブラグを交換する。電池を新品に交換する。
エンジンがかからない	燃料フィルターが詰まっている。 又は、エアクリーナー、マフラー内の汚れ	燃料フィルターの掃除、交換をする。エアクリーナー、 マフラー内の掃除
エンシンかかからない	オーバーチョーク(チョークのしすぎ)	ブラグを外しエンジン内の燃料を空にしてから再スタート ブラグが切れていないかも再チェック
	キャブレターの調整不足	ニードルバルブ、アイドリング調整ネジを元の基準位置に戻す
	サーボリンゲージの調整不足	サーボをニュートラルにしてから、再度リンゲージをやり直す
	燃料タンクに燃料が入っていない	燃料タンクに燃料を入れる
エンジンはかかるが	燃料チューブ、エアクリーナー、マフラー内の汚れ	汚れ又は、詰まっている部分の掃除
すぐに止まる。	スロットルバルブの調整不備	スロットルバルブ及びアイドル、ニードルの調整
	エンジンのオーバーヒート	エンジンが冷えるのを待ってからニードルを2~3回開けて再 スタート
	スロットルバルブ、ニードルバルブの調整不備	ニードルパルブを元の基準位置に戻してから再スタート
エンジンがうまく吹き上がらない	マフラーからのブレッシャーが低い場合	燃料タンクからのブレッシャーチューブがちゃんとつながって いるか?チューブに穴が開いていないか
	送信機、受信機のパッテリー不足	バッテリーの交換又は充電
車が思い通り動かない	電波の受信状態が良くない	送信機及び受信機のアンテナを完全に伸ばす
*高熱部分ですので手袋等をして下さい。	サーボリンゲージの調整不足	サーボをニュートラルにしてから調整し直し







## ENGINE PARTS

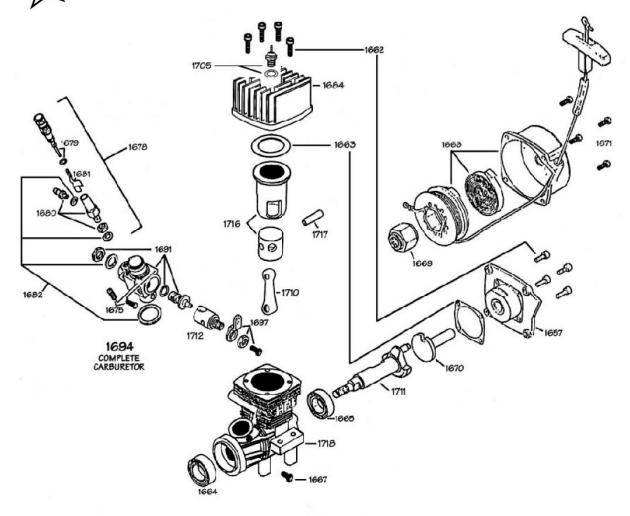

### HPI NITRO STAR 15FE PARTS

NEEDLE VALVE WITH HOLDER

SPRING FOR NEEDLE VALVE

CARBURETOR GASKET SET (4 PCS)

1615	NITRO STAR 15FE ENGINE	120.00	1684	HEAT SINK HEAD (DIE CAST/15)	12.00
1657	COVER PLATE (PULL STARTER)	7.00	1691	CARBURETOR (MAIN BODY) SILVER W/O IDLE SCRI	EW 31.00
1662	SCREW SET (8PCS)	4.00	1694	CARBURETOR (COMPLETE/4mm/12E/15FE)	49.00
1663	GASKET SET	3.00	1697	THROTTLE ARM SET	3.00
1664	CRANK SHAFT BEARING (FRONT)	11.00	1705	GLOW PLUG	7.00
1665	CRANK SHAFT BEARING (REAR)	11.00	1710	CONNECTING ROD (12E/15FE)	14.00
1667	SCREW SET (2PCS/CARBURETOR)	2.00	1711	CRANK SHAFT (PULL STARTER 12E/15FE)	41.00
1668	PULL STARTER (NO ONE-WAY BEARING)	18.00	1712	ROTOR SET 4mm (12E/15FE)	14.00
1669	ONE-WAY BEARING	18.00	1716	CYLINDER AND PISTON SET (NITRO STAR 15E)	48.00
1670	STARTING SHAFT	5.50	1717	PISTON PIN (NITRO STAR 15E)	4.00
1671	SCREW SET (4PCS/PULL STARTER)	2.00	1718	CRANK CASE (NITRO STAR 15FE )	27.00
1675	ADJUST SCREW SET (WITH SPRING)	2.80	-	201	
1678	NEEDLE VALVE (COMPLETE)	16.00	OPTIC	ON PARTS	
1679	NEEDLE WITH O-RING	8.00			



1680

1681

1682



53.00

CARBURETOR (COMPLETE/5.5mm)

8.00

2.00

2.50

## Super Nitro RS4 Option Parts オプションパーツ



#A910 2 Speed Transmission 2スピードセット

FF	2 Speed Gear Ratios 2スピード ギヤ比	Shift Split	Pinion ピニオン 1st 2nd 1速 2速	Spur スパー 1st 2nd 1速 2速	Ratio ギヤ比 1st 2nd 1速 2速
STU	A910 2 Speed Set 2スピードセット	3 tooth difference 3枚とび	13 - 16	44 - 41	7.33 - 5.55
SPEED	● A818 Second Gear Set 39-18 2速ギヤセット	5 tooth difference 5枚とび	NEW! 13 - 18	NEW! 44 - 39	7.33 - 4.69
2.5	● A819 Second Gear Set 37-20 2速ギヤセット	7 tooth difference 7 枚とび	NEW! 13 - 20	NEW! 44 - 37	7.33 - 4.00



● Option parts for A910 2 Speed set A910 オプションパーツ



#A925 40mm Lightweight Flywheel for Pullstart SP フライホイール



#A926 32mm Lightweight Flywheel for Non-Pullstart SP フライホイール



Engine Mounts
SP. エンジンマウント



#A920 Heat Sink Engine Mounts ローハイトSPエンジンマウント



#A905 39T Ball Diff Set ボールデフセット

 




#A950 Exhaust Header EX マニホールド



#A928 Oil Catch HPI 12/15 オイルキャッチ




Stainless Steel Hinge Pins ステンレスサスシャフトセット



#A907 Gear Brace Set ギヤブレースセット


 
#A959 Super Front One-Way Diff 39T スーパーフロントワンウェイデフ





ショックスプリング



#A813-A514 Clutch Bells クラッチベル



SuperNitre 12







## PARTS LIST



	QTY	Name	Retail Price	Part #	QTY N	lame	Retail Prio
615	1	NITRO STAR 15FE ENGINE \$	120.00	Z170	1	SILICONE SHOCK OIL #300	\$ 3.50
05	1	GLOW PLUG	7.00	Z224	10	WASHER M3x8mm	1.00
033	2	SUPER STAR WHEEL 57x35mm (2.2") GRAY	6.00	Z242	20	E CLIP E2mm	1.00
590	2	RACING SLICK TIRE M COMPOUND 57x35mm (2.2")	9.00	Z243	10	E CLIP E3mm	1.00
22	10	BODY PIN (M)	2.00	Z244	10	E CLIP E4mm	1.00
63	1	SERVO TAPE 20x100mm (5pcs)	4.00	Z253	10	SPRING PIN 2x10mm	1.50
228	2	NYLON REUSABLE BATTERY STRAP	2.00	Z264	10	PIN 2x10mm	1.50
307	2	SHOCK SHAFT 3x31mm	3.00	Z505	6	BUTTON HEAD SCREW M3x15mm	1.50
313	1	SHOCK CAP 12mm	3.50	Z509	6	BUTTON HEAD SCREW M3x30mm	2.00
314	2	BLADDER 10x4mm	2.00	Z517	10	BINDER HEAD SCREW M3x8mm	1.50
317	1	10mm SHOCK PARTS SET	4.50	Z526	6	FLAT HEAD SCREW M3x8mm	1.00
320	8	SILICONE O-RING P-3 (CLEAR)	2.00	Z529	6	FLAT HEAD SCREW M3x15mm	2.00
336	2	SHOCK SPRING 13x29x1.55mm (BLACK)	4.50	Z543	6	CAP HEAD SCREW M3x10mm	1.50
5317	2	TURNBUCKLE 4-40x34mm	3.00	Z561	6	TP. FLANGED SCREW M3x10mm	2.00
5510		TURNBUCKLE M4x20mm	2.50	Z567	10	TP. BINDER HEAD SCREW M3x10mm	1.00
32	4	FLANGED BALL 5.8x7mm	4.00	Z568	10	TP. BINDER HEAD SCREW M3x12mm	1.00
80	1	SERVO SAVER SHAFT	3.00	Z569	10	TP. BINDER HEAD SCREW M3x15mm	1.00
81	1	SERVO SAVER PIPE	2.50	Z571	6	TP. BINDER HEAD SCREW M3x20mm	1.00
82	2	SERVO SAVER NUT SET (NUT x 1, SPRING x 1)	3.00	Z578	10	TP. FLAT HEAD SCREW M3x12mm	1.00
83 85	2	PILOT SHAFT 4x15mm	4.00	Z581	10	TP. FLAT HEAD SCREW M3x18mm	1.00
85	2	STEERING JOINT SET	1.00 5.00	Z593	4	SCREW SHAFT 3x27mm	2.50
81 40	1	FLANGE SHAFT SET 3x36mm, 3x42mm FRONT BULKHEAD SET	6.00	Z599 Z653	6	SCREW SHAFT 3x40mm NUT M3	1.00
551	2	UPPER ARM/BODY MOUNT SET (SUPER NITRO RS4)	7.00	Z684	4	FLANGE LOCK NUT M4	2.50
590	1	SERVO SAVER SET	4.00	Z694	10	WASHER M5x10x0.5mm	1.00
111	1	BUMPER SET (SUPER NITRO RS4)	8.00	Z700	6	SET SCREW M3x3mm	2.00
30	1	DIFF PULLEY SET (39T)	6.50	Z725	6	SET SCREW M4x10mm	2.50
144	1	SPUR GEAR 44T	4.00	Z901	1	ALLEN WRENCH 1.5mm	1.00
154	1	SUSPENSION ARM SET (SUPER NITRO RS4)	5.00	Z903	1	ALLEN WRENCH 2.5mm	1.00
161	1	UPRIGHT SET (8, 10 DEGREE CASTER)	5.00	Z904	1	ALLEN WRENCH 2.0mm	1.00
170	1	REAR BULKHEAD SET	7.00	Z950	1	CROSS WRENCH (SMALL)	2.00
181	1	UPPER DECK SET (SUPER NITRO RS4)	9.00	Z960	1	TURNBUCKLE WRENCH	2.00
520	1	ARM BRACE SET	6.00				
540	2	HPI SPORTS SHOCK BODY (45-56mm)	3.50	Sets			
548	2	AXLE 5 x 35mm (FRONT)	5.50	A770	1	HPI SPORT SHOCK SET (45-56mm)	18.00
549	2	AXLE 5 x 40mm (REAR)	5.50			THE OTHER STREET, (10 SOURIN)	10.00
553	2	DOGBONES 6x57mm (SUPER NITRO RS4)	5.50	Optio	n Pa	rts	
558	2	DIFF SHAFT	5.00		1		220.00
40	1	BELT S3M 471 (157T) 5mm	7.50	1600 1605	1	NITRO STAR 1599 NITRO STAR 15	135.00
300			14.00	1005	1		135.00
-00	1	GAS TANK SET	14.00	6818	1		4.00
		FLY WHEEL	8.50	6818	1	10mm PISTONS TEFLON SET (2 SET) SHOCK SPRING 13v29v1 4mm (WHITE)	
301	1			6833	2	SHOCK SPRING 13x29x1.4mm (WHITE) SOFT	4.50
301 304	1 1	FLY WHEEL	8.50	6833 6834	2	SHOCK SPRING 13x29x1.4mm (WHITE) SHOCK SPRING 13x29x1.45mm (YELLOW)	4.50 4.50
301 304 305	1 1 1	FLY WHEEL COLLET 7x5mm	8.50 2.00	6833 6834 6835	2 2 2	SHOCK SPRING 13x29x1.4mm (WHITE) SHOCK SPRING 13x29x1.45mm (YELLOW) SHOCK SPRING 13x29x1.5mm (RED)	4.50 4.50 4.50
301 304 305 308	1 1 1	FLY WHEEL COLLET 7x5mm PILOT SHAFT M5	8.50 2.00 3.50	6833 6834 6835 6837	2 2 2 2	SHOCK SPRING 13x29x1.4mm (WHITE) SHOCK SPRING 13x29x1.45mm (YELLOW) SHOCK SPRING 13x29x1.5mm (RED) SHOCK SPRING 13x29x1.6mm (GREEN)	4.50 4.50 4.50
301 304 305 308 310	1 1 1 1 2	FLY WHEEL COLLET 7x5mm PILOT 9HAFT M5 CLUTCH 9H0E	8.50 2.00 3.50 3.50	6833 6834 6835 6837 6838	2 2 2 2	SHOCK SPRING 13x29x1.4mm (WHITE) SHOCK SPRING 13x29x1.45mm (YELLOW) SHOCK SPRING 13x29x1.5mm (RED) SHOCK SPRING 13x29x1.65mm (GREEN) SHOCK SPRING 13x29x1.65mm (BLUE)	4.50 4.50 4.50 4.50 4.50
301 304 305 308 310 313	1 1 1 1 2 1 1 2	FLY WHEEL COLLET 7x5mm PILOT SHAFT M5 CLUTCH SHOE BRAKE DISK SET CLUTCH BELL 13T CLUTCH SPRING 0.7mm	8.50 2.00 3.50 3.50 3.50 6.00 1.00	6833 6834 6835 6837 6838 6839	2 2 2 2 2	SHOCK SPRING 13x29x1.4mm (WHITE) SHOCK SPRING 13x29x1.45mm (YELLOW) SHOCK SPRING 13x29x1.5mm (RED) SHOCK SPRING 13x29x1.6mm (GREEN) SHOCK SPRING 13x29x1.6mm (BUE) SHOCK SPRING 13x29x1.7mm (PURPLE)	4.50 4.50 4.50 4.50 4.50
301 304 305 308 310 313 327 330	1 1 1 1 2 1 1 2	FLY WHEEL COLLET 7x5mm PILOT SHAFT M5 CLUTCH SHOE BRAKE DISK SET CLUTCH BELL 13T CLUTCH SPRING 0.7mm GEAR SHAFT 5x64mm	8.50 2.00 3.50 3.50 3.50 6.00 1.00 3.50	6833 6834 6835 6837 6838 6839 A111	2 2 2 2 2 2	SHOCK SPRING 13x29x1.4mm (WHITE) SHOCK SPRING 13x29x1.45mm (YELLOW) SHOCK SPRING 13x29x1.5mm (RED) SHOCK SPRING 13x29x1.6mm (GREEN) SHOCK SPRING 13x29x1.6mm (BLUE) SHOCK SPRING 13x29x1.7mm (PURPLE) SUPER SHOCKS 45-56mm	4.50 4.50 4.50 4.50 4.50 4.50 32.00
301 304 305 308 310 313 327 330 334	1 1 1 1 2 1 1 2 1 1	FLY WHEEL COLLET 7x5mm PILOT 6HAFT M5 CLUTCH 6HOE BRAKE DISK SET CLUTCH BELL 13T CLUTCH SPRING 0.7mm GEAR 6HAFT 5x64mm PULLEY 6HAFT 5x70mm GRAY	8.50 2.00 3.50 3.50 3.50 6.00 1.00 3.50 3.50	6833 6834 6835 6837 6838 6839 A111 A169	2 2 2 2 2	SHOCK SPRING 13x29x1.4mm (WHITE) SHOCK SPRING 13x29x1.45mm (YELLOW) SHOCK SPRING 13x29x1.5mm (RED) SHOCK SPRING 13x29x1.5mm (BREN) SHOCK SPRING 13x29x1.65mm (BLUE) SHOCK SPRING 13x29x1.7mm (PURPLE) SUPER SHOCKS 45-56mm ALUMINUM PILOT SHAFT (Use With BO17 Ball Bearings Only	4.50 4.50 4.50 4.50 4.50 4.50 32.00 6.00
801 804 805 808 810 813 827 830 834 838	1 1 1 1 2 1 1 2 1 1 4	FLY WHEEL COLLET 7x5mm PILOT SHAFT M5 CLUTCH SHOE BRAKE DISK SET CLUTCH BELL 13T CLUTCH SPRING 0.7mm GEAR SHAFT 5x64mm PULLEY SHAFT 5x70mm GRAY FLANGE PIPE 3x4.5x5.5mm	8.50 2.00 3.50 3.50 3.50 6.00 1.00 3.50 3.50 3.50	6833 6834 6835 6837 6838 6839 A111 A169 A209	2 2 2 2 2 3	SHOCK SPRING 13x29x1.4mm (WHITE) SHOCK SPRING 13x29x1.45mm (YELLOW) SHOCK SPRING 13x29x1.5mm (RED) SHOCK SPRING 13x29x1.65mm (GREEN) SHOCK SPRING 13x29x1.65mm (BLUE) SHOCK SPRING 13x29x1.7mm (PURPLE) SUPER SHOCKS 46-56mm ALUMINUM PILOT SHAFT (Use With BO17 Ball Bearings Only SWAY BAR SET	4.50 4.50 4.50 4.50 4.50 4.50 32.00 32.00 21.00
301 304 305 308 310 313 327 330 334 338 340	1 1 1 1 2 1 1 2 1 1 4 1	FLY WHEEL COLLET 7x5mm PILOT 5HAFT M5 CLUTCH 5HOE BRAKE DISK SET CLUTCH BELL 13T CLUTCH 9PRING O.7mm GEAR SHAFT 5x64mm PULLEY SHAFT 5x70mm GRAY FLANGE PIPE 3x4.5x5.5mm BRAKE PLATE SET	8.50 2.00 3.50 3.50 3.50 6.00 1.00 3.50 3.50 3.50 5.00	6833 6834 6835 6837 6838 6839 A111 A169	2 2 2 2 2 2 2 3 1	SHOCK SPRING 13x29x1.4mm (WHITE) SHOCK SPRING 13x29x1.45mm (YELLOW) SHOCK SPRING 13x29x1.5mm (RED) SHOCK SPRING 13x29x1.5mm (BREN) SHOCK SPRING 13x29x1.65mm (BLUE) SHOCK SPRING 13x29x1.7mm (PURPLE) SUPER SHOCKS 45-56mm ALUMINUM PILOT SHAFT (Use With BO17 Ball Bearings Only	4.50 4.50 4.50 4.50 4.50 4.50 32.00 32.00 21.00 7.00
301 304 305 308 310 313 327 330 334 338 340	1 1 1 1 2 1 1 2 1 1 4 1	FLY WHEEL COLLET 7x5mm PILOT 5HAFT M5 CLUTCH 5HOE BRAKE PISK 5ET CLUTCH BELL 13T CLUTCH 5PRING 0.7mm GEAR 5HAFT 5x64mm PULLEY 5HAFT 5x70mm GRAY FLANGE PIPE 3x4.5x5.5mm BRAKE PLATE 5ET BELT 53M 162 (54T) 5.5mm	8.50 2.00 3.50 3.50 3.50 6.00 1.00 3.50 3.50 3.50 3.50 6.00	6833 6834 6835 6837 6838 6839 A111 A169 A209 A814	2 2 2 2 2 2 2 3 1	SHOCK SPRING 13x29x1.4mm (WHITE) SHOCK SPRING 13x29x1.45mm (YELLOW) SHOCK SPRING 13x29x1.5mm (RED) SHOCK SPRING 13x29x1.6mm (GREEN) SHOCK SPRING 13x29x1.65mm (BLUE) SHOCK SPRING 13x29x1.7mm (PURPLE) SHOCK SPRING 13x29x1.7mm (PURPLE) SUPER SHOCKS 46-56mm ALUMINUM PILOT SHAFT (Use With BO17 Ball Bearings Only SWAY BAR SET CLUTCH BELL 14T	4.50 4.50 4.50 4.50 4.50 4.50 32.00 21.00 7.00
301 304 305 308 310 313 327 330 334 338 340 347	1 1 1 1 2 1 1 2 1 1 4 1 1	FLY WHEEL COLLET 7x5mm PILOT 6HAFT M5 CLUTCH 6HOE BRAKE DISK SET CLUTCH BELL 13T CLUTCH SPRING 0.7mm GEAR 6HAFT 5x64mm PULLEY 6HAFT 5x70mm GRAY FLANGE PIPE 3x4.5x5.5mm BRAKE PLATE 6ET BELT 53M 182 (54T) 5.5mm BELT 53M 180 (60T) 5.5mm	8.50 2.00 3.50 3.50 3.50 6.00 1.00 3.50 3.50 3.50 6.00 6.00	6833 6834 6835 6837 6838 6839 A111 A169 A209 A814 A815	2 2 2 2 2 2 2 3 1	SHOCK SPRING 13x29x1.4mm (WHITE) SHOCK SPRING 13x29x1.45mm (YELLOW) SHOCK SPRING 13x29x1.5mm (RED) SHOCK SPRING 13x29x1.6mm (GREEN) SHOCK SPRING 13x29x1.6mm (BLUE) SHOCK SPRING 13x29x1.7mm (PURPLE) SHOCK SPRING 13x29x1.7mm (PURPLE) SUPER SHOCKS 46-56mm ALUMINUM PILOT SHAFT (Use With BO17 Ball Bearings Only SWAY BAR SET CLUTCH BELL 14T CLUTCH BELL 15T	4.50 4.50 4.50 4.50 4.50 32.00 32.00 21.00 7.00 13.00
301 304 305 308 310 313 327 330 334 338 340 347 348 350	1 1 1 1 2 1 1 2 1 1 4 1 1 1	FLY WHEEL COLLET 7x5mm PILOT SHAFT M5 CLUTCH SHOE BRAKE DISK SET CLUTCH BELL 13T CLUTCH SPRING 0.7mm GEAR SHAFT 5x64mm PULLEY SHAFT 5x70mm GRAY FLANGE PIPE 3x4.5x5.5mm BRAKE PLATE SET BELT 53M 162 (54T) 5.5mm DIFF BEYEL GEAR SET	8.50 2.00 3.50 3.50 3.50 6.00 1.00 3.50 3.50 3.50 6.00 6.00 6.00 5.00	6833 6834 6835 6837 6838 6839 A111 A169 A209 A814 A815 * A818	2 2 2 2 2 2 2 2 3 1 1	SHOCK SPRING 13x29x1.4mm (WHITE) SHOCK SPRING 13x29x1.45mm (YELLOW) SHOCK SPRING 13x29x1.5mm (RED) SHOCK SPRING 13x29x1.65mm (GREEN) SHOCK SPRING 13x29x1.65mm (BLUE) SHOCK SPRING 13x29x1.65mm (BLUE) SHOCK SPRING 13x29x1.7mm (PURPLE) SUPER SHOCKS 45-56mm ALUMINUM PILOT SHAFT (Use With BO17 Ball Bearings Only SWAY BAR SET CLUTCH BELL 14T CLUTCH BELL 15T 2 SPEED SECOND GEAR SET (39/18 TOOTH) 2 SPEED SECOND GEAR SET (37/20 TOOTH)	4.50 4.50 4.50 4.50 4.50 32.00 32.00 21.00 7.00 13.00
801 804 805 808 813 827 833 834 834 834 840 847 848 850 860	1 1 1 1 2 1 1 2 1 1 1 4 1 1 1 1 1 1 1 1	FLY WHEEL COLLET 7x5mm PILOT 5HAFT M5 CLUTCH 5HOE BRAKE DISK SET CLUTCH BELL 13T CLUTCH SPRING 0.7mm GEAR SHAFT 5x64mm PULLEY SHAFT 5x70mm GRAY FLANGE PIPE 3x4.5x5.5mm BRAKE PLATE SET BELT 53M 162 (54T) 5.5mm DIFF BEVEL GEAR SET AIR CLEANER SET	8.50 2.00 3.50 3.50 6.00 1.00 3.50 3.50 5.00 6.00 6.00 5.00 3.50	6833 6834 6835 6837 6838 6839 A111 A169 A209 A814 A815	2 2 2 2 2 2 2 3 1 1 1	SHOCK SPRING 13x29x1.4mm (WHITE) SHOCK SPRING 13x29x1.45mm (YELLOW) SHOCK SPRING 13x29x1.5mm (RED) SHOCK SPRING 13x29x1.5mm (GREEN) SHOCK SPRING 13x29x1.65mm (BLUE) SHOCK SPRING 13x29x1.7mm (PURPLE) SHOCK SPRING 13x29x1.7mm (PURPLE) SUPER SHOCKS 45-56mm ALUMINUM PILOT SHAFT (Use With BO17 Ball Bearings Only SWAY BAR SET CLUTCH BELL 14T CLUTCH BELL 15T 2 SPEED SECOND GEAR SET (39/18 TOOTH)	4,500 4,500 4,500 4,500 4,500 32,000 21,000 7,000 13,000 14,000
601 604 605 608 610 613 627 630 634 638 640 647 648 650 660	1 1 1 1 2 1 1 2 1 1 1 4 1 1 1 1 1 1 1 1	FLY WHEEL COLLET 7x5mm PILOT 5HAFT M5 CLUTCH 5HOE BRAKE DISK SET CLUTCH BELL 13T CLUTCH GPRING O.7mm GEAR 5HAFT 5x64mm PULLEY 5HAFT 5x70mm GRAY FLANGE PIPE 3x4.5x5.5mm BRAKE PLATE SET BELT 53M 162 (54T) 5.5mm BELT 53M 180 (60T) 5.5mm DIFF BEVEL GEAR SET AIR CLEANER SET SILICONE TUBE 2x4x330mm (FUEL LINE)	8.50 2.00 3.50 3.50 6.00 1.00 3.50 3.50 5.00 6.00 6.00 5.00 3.50	6833 6834 6835 6837 6838 6839 A111 A169 A209 A814 A815 * A818 A844	2 2 2 2 2 3 1 1 1 1 1 1	SHOCK SPRING 13x29x1.4mm (WHITE) SHOCK SPRING 13x29x1.45mm (YELLOW) SHOCK SPRING 13x29x1.5mm (RED) SHOCK SPRING 13x29x1.6mm (GREEN) SHOCK SPRING 13x29x1.6mm (BLUE) SHOCK SPRING 13x29x1.7mm (PURPLE) SUPER SHOCKS 45-56mm ALUMINUM PILOT SHAFT (Use With BO17 Ball Bearings Only SWAY BAR SET CLUTCH BELL 14T CLUTCH BELL 14T 2 SPEED SECOND GEAR SET (39/18 TOOTH) SPEED SECOND GEAR SET (37/20 TOOTH) FIBER BRAKE DISK	4.50 4.50 4.50 4.50 4.50 32.00 ) 6.00 21.00 7.00 7.00 13.00 14.00
301 304 305 308 310 313 327 330 334 338 340 347 348 350 360 365 370	1 1 1 1 2 1 1 2 1 1 4 1 1 1 1 1 1 1 1 1	FLY WHEEL COLLET 7x5mm PILOT 9HAFT M5 CLUTCH 9HOE BRAKE DISK SET CLUTCH BELL 13T CLUTCH SPRING 0.7mm GEAR SHAFT 5x64mm PULLEY 9HAFT 5x70mm GRAY FLANGE PIPE 3x4.5x5.5mm BRAKE PLATE 9ET BELT 93M 182 (54T) 5.5mm BELT 93M 182 (64T) 5.5mm DIFF BEVEL GEAR 9ET AIR CLEANER 9ET SILICONE TUBE 2x4x330mm (FUEL LINE) MUFFLER 9ET	8.50 2.00 3.50 3.50 3.50 6.00 1.00 3.50 3.50 5.00 6.00 6.00 5.00 3.50	6833 6834 6835 6837 6838 6839 A111 A169 A209 A814 A815 * A818 A844 A848	2 2 2 2 2 3 1 1 1 1 1 1 1 1	SHOCK SPRING 13x29x1.4mm (WHITE) SHOCK SPRING 13x29x1.45mm (YELLOW) SHOCK SPRING 13x29x1.5mm (RED) SHOCK SPRING 13x29x1.6mm (GREEN) SHOCK SPRING 13x29x1.6mm (BLUE) SHOCK SPRING 13x29x1.7mm (PURPLE) SHOCK SPRING 13x29x1.7mm (PURPLE) SUPER SHOCKS 46-56mm ALUMINUM PILOT SHAFT (Use With BO17 Ball Bearings Only SWAY BAR SET CLUTCH BELL 14T CLUTCH BELL 14T CLUTCH BELL 15T 2 SPEED SECOND GEAR SET (39/18 TOOTH) FIBER BRAKE DISK NITRO RACING CLUTCH	4.50 4.50 4.50 4.50 4.50 32.00 ) 6.00 21.00 7.00 13.00 13.00 14.00 35.00
801 804 805 808 810 813 827 838 840 847 848 850 865 870 874	1 1 1 1 2 1 1 2 1 1 4 1 1 1 1 1 1 1 1 1	FLY WHEEL COLLET 7x5mm PILOT SHAFT M5 CLUTCH SHOE BRAKE DISK SET CLUTCH BELL 13T CLUTCH SPRING 0.7mm GEAR SHAFT 5x64mm PULLEY SHAFT 5x70mm GRAY FLANGE PIPE 3x4.5x5.5mm BRAKE PLATE SET BELT 53M 162 (54T) 5.5mm DIFF BEYEL GEAR SET AIR CLEANER SET SILICONE TUBE 2x4x330mm (FUEL LINE) MUFFLER SET SILICONE TUBE 6x10x100mm (MUFFLER)	8.50 2.00 3.50 3.50 3.50 6.00 1.00 3.50 3.50 5.00 6.00 6.00 5.00 3.50 1.20 8.00	6833 6834 6835 6837 6838 6839 A111 A169 A209 A814 A815 * A818 * A818 A844 A865 A905	2 2 2 2 2 2 1 1 1 1 1 1 1 1 1 1 1 1 1	SHOCK SPRING 13x29x1.4mm (WHITE) SHOCK SPRING 13x29x1.45mm (YELLOW) SHOCK SPRING 13x29x1.5mm (RED) SHOCK SPRING 13x29x1.5mm (RED) SHOCK SPRING 13x29x1.6mm (BEUE) SHOCK SPRING 13x29x1.7mm (PURPLE) SHOCK SPRING 1	4,50 4,50 4,50 4,50 4,50 32,00 21,00 7,00 13,00 14,00 35,00 34,00
601 604 605 608 610 613 627 630 634 647 648 650 665 670 674	1 1 1 1 2 1 1 2 1 1 4 1 1 1 1 1 1 1 1 1	FLY WHEEL COLLET 7x5mm PILOT SHAFT M5 CLUTCH SHOE BRAKE DISK SET CLUTCH BELL 13T CLUTCH SELL 13T CLUTCH SFRING 0.7mm GEAR SHAFT 5x64mm PULLEY SHAFT 5x70mm GRAY FLANGE PIPE 3x4.5x5.5mm BRAKE PLATE SET BELT 53M 162 (54T) 5.5mm BELT 53M 160 (60T) 5.5mm DIFF BEVEL GEAR SET AIR CLEANER SET SILICONE TUBE 2x4x330mm (FUEL LINE) MUFFLER SET SILICONE TUBE 6x10x100mm (MUFFLER) EXHAUST GASKET	8.50 2.00 3.50 3.50 6.00 1.00 3.50 3.50 5.00 6.00 6.00 5.00 3.50 1.20 8.00 1.50 2.50	6833 6834 6835 6837 6838 6839 A111 A169 A209 A814 A815 * A819 A844 A885 A905 A907	2 2 2 2 2 2 3 1 1 1 1 1 1 1 1 1 1 1 1 1	SHOCK SPRING 13x29x1.4mm (WHITE) SHOCK SPRING 13x29x1.45mm (YELLOW) SHOCK SPRING 13x29x1.5mm (RED) SHOCK SPRING 13x29x1.65mm (GREEN) SHOCK SPRING 13x29x1.65mm (BLUE) SHOCK SPRING 13x29x1.65mm (BLUE) SHOCK SPRING 13x29x1.7mm (PURPLE) SUPER SHOCKS 46-56mm ALUMINUM PILOT SHAFT (Use With BO17 Ball Bearings Only SWAY BAR SET CLUTCH BELL 14T CLUTCH BELL 15T 2 SPEED SECOND GEAR SET (39/18 TOOTH) 2 SPEED SECOND GEAR SET (37/20 TOOTH) FIBER BRAKE DISK NITRO RACING CLUTCH 39T BALL DIFFERENTIAL SET GEAR BRACE SET	4.50 4.50 4.50 4.50 4.50 32.00 7.00 7.00 13.00 14.00 15.00 34.00 69.00
801 804 805 808 810 813 827 830 840 847 848 850 865 870 874 875	1 1 1 1 2 1 1 1 1 1 1 1 1 1 1 5 1	FLY WHEEL COLLET 7x5mm PILOT 5HAFT M5 CLUTCH 5HOE BRAKE DISK SET CLUTCH BELL 13T CLUTCH BELL 13T CLUTCH SPRING O.7mm GEAR SHAFT 5x64mm PULLEY SHAFT 5x70mm GRAY FLANGE PIPE 3x4.5x5.5mm BRAKE PLATE SET BELT 53M 162 (54T) 5.5mm BELT 53M 162 (54T) 5.5mm DIFF BEYEL GEAR SET AIR CLEANER SET SILICONE TUBE 2x4x330mm (FUEL LINE) MUFFLER SET SILICONE TUBE 6x10x100mm (MUFFLER) EXHAUST GASKET LINKAGE SET	8.50 2.00 3.50 3.50 6.00 1.00 3.50 3.50 5.00 6.00 6.00 5.00 3.50 1.20 8.00 1.50 2.50 3.00	6833 6834 6835 6837 6838 6839 A111 A169 A209 A814 A815 * A818 * A818 A844 A865 A907 A910	2 2 2 2 2 3 1 1 1 1 1 1 1 1 1 1 1 1 1 1	SHOCK SPRING 13x29x1.4mm (WHITE) SHOCK SPRING 13x29x1.45mm (YELLOW) SHOCK SPRING 13x29x1.5mm (RED) SHOCK SPRING 13x29x1.6mm (GREEN) SHOCK SPRING 13x29x1.6mm (GREEN) SHOCK SPRING 13x29x1.6mm (BLUE) SHOCK SPRING 13x29x1.7mm (PURPLE) SUPER SHOCKS 45-56mm ALUMINUM PILOT SHAFT (Use With BO17 Ball Bearings Only SWAY BAR SET CLUTCH BELL 14T CLUTCH BELL 15T 2 SPEED SECOND GEAR SET (39/18 TOOTH) 2 SPEED SECOND GEAR SET (37/20 TOOTH) FIBER BRAKE DISK NITRO RACING CLUTCH 39T BALL DIFFERENTIAL SET GEAR BRACE SET 2 SPEED TRANSMISSION FOR Nitro R64 (44/13-41/16)	4,50 4,50 4,50 4,50 32,00 9,00 21,00 7,00 13,00 14,00 15,00 34,00 45,00 45,00
601 604 605 608 610 613 627 630 634 638 640 647 648 650 665 670 674 675 690	1 1 1 1 2 1 1 1 1 1 1 1 1 1 1 5 1 1 1 1	FLY WHEEL COLLET 7x5mm PILOT 6HAFT M5 CLUTCH 6HOE BRAKE DISK SET CLUTCH BELL 13T CLUTCH SPRING 0.7mm GEAR SHAFT 5x64mm PULLEY 6HAFT 5x70mm GRAY FLANGE PIPE 3x4.5x5.5mm BRAKE PLATE 6ET BELT 53M 182 (54T) 5.5mm BELT 53M 182 (64T) 5.5mm DIFF BEVEL GEAR SET AIR CLEANER 9ET SILICONE TUBE 2x4x330mm (FUEL LINE) MUFFLER 6ET SILICONE TUBE 6x10x100mm (MUFFLER) EXHAUST GASKET LINKAGE 6ET STOPPER 2.1x6x5mm	8.50 2.00 3.50 3.50 3.50 6.00 1.00 3.50 3.50 6.00 6.00 6.00 5.00 3.50 1.20 8.00 1.50 2.50 3.50	6833 6834 6835 6837 6839 A111 A169 A209 A814 A815 * A819 A844 A865 A905 A907 A910 A915	2 2 2 2 2 2 2 2 2 3 1 1 1 1 1 1 1 1 1 1	SHOCK SPRING 13x29x1.4mm (WHITE) SHOCK SPRING 13x29x1.45mm (YELLOW) SHOCK SPRING 13x29x1.5mm (RED) SHOCK SPRING 13x29x1.6mm (GREEN) SHOCK SPRING 13x29x1.6mm (GREEN) SHOCK SPRING 13x29x1.7mm (PURPLE) SHOCK SPRING 13x29x1.7mm (PURPLE) SUPER SHOCKS 46-56mm ALUMINUM PILOT SHAFT (Use With BO17 Ball Bearings Only SWAY BAR SET CLUTCH BELL 14T CLUTCH BELL 14T CLUTCH BELL 16T 2 SPEED SECOND GEAR SET (39/18 TOOTH) FIBER BRAKE DISK NITRO RACING CLUTCH 39T BALL DIFFERENTIAL SET GEAR BRACE SET 2 SPEED TRANSMISSION For Nitro RS4 (44/13-41/16) HEAT SINK ENGINE MOUNT 20mm For Pull Start	4,50 4,50 4,50 4,50 4,50 32,00 21,00 7,00 13,00 13,00 14,00 35,00 34,00 69,00 45,00
3001 3004 3005 3008 310 313 327 3330 334 338 340 347 348 350 360 365 370 374 397 399 399 399 399 399 399 399	1 1 1 1 2 1 1 1 2 1 1 1 1 1 1 1 1 1 1 1	FLY WHEEL COLLET 7x5mm PILOT SHAFT M5 CLUTCH SHOE BRAKE DISK SET CLUTCH BELL 13T CLUTCH SPRING 0.7mm GEAR SHAFT 5x64mm PULLEY SHAFT 5x70mm GRAY FLANGE PIPE 3x4.5x5.5mm BRAKE PLATE SET BELT S3M 162 (64T) 5.5mm DIFF BEYEL GEAR SET AIR CLEANER SET SILICONE TUBE 2x4x330mm (FUEL LINE) MUFFLER SET SILICONE TUBE 6x10x100mm (MUFFLER) EXHAUST GASKET LINKAGE SET STOPPER 2.1x6x5mm PIVOT 2.5mm	8.50 2.00 3.50 3.50 3.50 6.00 1.00 3.50 3.50 5.00 6.00 6.00 5.00 3.50 1.20 8.00 1.50 2.50 3.00	6833 6834 6835 6837 6839 A111 A169 A209 A814 A815 * A818 * A819 A844 A885 A905 A907 A910 A915 A920	2 2 2 2 2 2 2 2 3 1 1 1 1 1 1 1 1 1 1 1	SHOCK SPRING 13x29x1.4mm (WHITE) SHOCK SPRING 13x29x1.45mm (YELLOW) SHOCK SPRING 13x29x1.45mm (RED) SHOCK SPRING 13x29x1.6mm (RED) SHOCK SPRING 13x29x1.6mm (BLUE) SHOCK SPRING 13x29x1.7mm (PURPLE) SHOCK SPRING 13x29x1.7mm (PURPLE) SUPER SHOCKS 46-56mm ALUMINUM PILOT SHAFT (Use With BO17 Ball Bearings Only SWAY BAR SET CLUTCH BELL 14T CLUTCH BELL 16T 2 SPEED SECOND GEAR SET (39/18 TOOTH) 2 SPEED SECOND GEAR SET (37/20 TOOTH) FIBER BRAKE DISK NITRO RACING CLUTCH 39T BALL DIFFERENTIAL SET GEAR BRACE SET 2 SPEED TRANSMISSION For Nitro RS4 (44/13-41/16) HEAT SINK ENGINE MOUNT 20mm For Pull Start HEAT SINK ENGINE MOUNT 15mm For Non-Pull Start	4.50 4.50 4.50 4.50 32.00 32.00 7.00 7.00 13.00 14.00 35.00 34.00 69.00 45.00 20.00
3001 3004 3005 3008 310 313 327 3330 334 338 340 347 348 350 360 365 370 374 399 399 399 399 399 399 399 39	1 1 1 1 2 1 1 1 1 1 1 1 1 5 1 1 1 1 1 1	FLY WHEEL COLLET 7x5mm PILOT SHAFT M5 CLUTCH SHOE BRAKE DISK SET CLUTCH BELL 13T CLUTCH SELL 13T CLUTCH SPRING 0.7mm GEAR SHAFT 5x64mm PULLEY SHAFT 5x70mm GRAY FLANGE PIPE 3x4.5x5.5mm BRAKE PLATE SET BELT S3M 162 (54T) 5.5mm BELT S3M 162 (54T) 5.5mm DIFF BEYEL GEAR SET AIR CLEANER SET SILICONE TUBE 2x4x330mm (FUEL LINE) MUFFLER SET SILICONE TUBE 6x10x100mm (MUFFLER) EXHAUST GASKET LINKAGE SET STOPPER 2.1x6x5mm PIVOT 2.5mm SUPER NITRO CHASSIS (ALUMINUM 175 T2.5mm PURPLE)	8.50 2.00 3.50 3.50 6.00 1.00 3.50 3.50 6.00 6.00 6.00 6.00 6.00 6.00 1.20 8.00 1.50 2.50 3.00 2.50 3.00 0.34,00	6833 6834 6835 6837 6838 6839 A111 A169 A209 A814 A815 * A819 A844 A885 A905 A907 A910 A915 A920 A925	2 2 2 2 2 2 2 2 3 1 1 1 1 1 1 1 1 1 1 2 2 1	SHOCK SPRING 13x29x1.4mm (WHITE) SHOCK SPRING 13x29x1.45mm (YELLOW) SHOCK SPRING 13x29x1.5mm (RED) SHOCK SPRING 13x29x1.65mm (GREEN) SHOCK SPRING 13x29x1.65mm (BLUE) SHOCK SPRING 13x29x1.65mm (BLUE) SHOCK SPRING 13x29x1.7mm (PURPLE) SUPER SHOCKS 45-56mm ALUMINUM PILOT SHAFT (Use With BO17 Ball Bearings Only SWAY BAR SET CLUTCH BELL 14T CLUTCH BELL 15T 2 SPEED SECOND GEAR SET (39/18 TOOTH) 2 SPEED SECOND GEAR SET (37/20 TOOTH) FIBER BRAKE DISK NITRO RACING CLUTCH 39T BALL DIFFERENTIAL SET GEAR BRACE SET 2 SPEED TRANSMISSION FOR Nitro RS4 (44/13-41/16) HEAT SINK ENGINE MOUNT 20mm For Pull Start LIGHT WEIGHT FLYWHEEL 40mm For Pull Start LIGHT WEIGHT FLYWHEEL 40mm For Pull Start	4.50 4.50 4.50 4.50 4.50 4.50 7.00 7.00 13.00 14.00 35.00 45.00 45.00 18.00 18.00
601 604 605 608 310 313 327 330 334 338 340 347 348 360 365 370 374 375 399 395 398	1 1 1 1 2 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	FLY WHEEL COLLET 7x5mm PILOT 5HAFT M5 CLUTCH 5HOE BRAKE DISK SET CLUTCH BELL 13T CLUTCH SPRING 0.7mm GEAR SHAFT 5x64mm PULLEY 5HAFT 5x70mm GRAY FLANGE PIPE 3x4.5x5.5mm BRAKE PLATE SET BELT 53M 162 (54T) 5.5mm BELT 53M 162 (54T) 5.5mm DIFF BEVEL GEAR SET AIR CLEANER SET SILICONE TUBE 2x4x330mm (FUEL LINE) MUFFLER SET SILICONE TUBE 6x10x100mm (MUFFLER) EXHAUST GASKET LINKAGE SET 5TOPPER 2.1x6x5mm PIVOT 2.5mm SUPER NITRO CHASSIS (ALUMINUM 175 T2.5mm PURPLE) BALL BEARING 4x8x3mm ZZ For Steering Post	8.50 2.00 3.50 3.50 6.00 1.00 3.50 3.50 5.00 6.00 6.00 6.00 5.00 1.50 2.50 3.00 2.50 3.00 2.50 3.00 14.00	6833 6834 6835 6837 6838 6839 A111 A169 A209 A814 A815 * A819 A844 A865 A905 A907 A910 A915 A926	2 2 2 2 2 2 2 2 2 2 3 1 1 1 1 1 1 1 1 1	SHOCK SPRING 13x29x1.4mm (WHITE) SHOCK SPRING 13x29x1.45mm (YELLOW) SHOCK SPRING 13x29x1.45mm (RED) SHOCK SPRING 13x29x1.65mm (RED) SHOCK SPRING 13x29x1.65mm (BRUE) SHOCK SPRING 13x29x1.65mm (BLUE) SHOCK SPRING 13x29x1.7mm (PURPLE) SUPER SHOCKS 46-56mm ALUMINUM PILOT SHAFT (Use With BO17 Ball Bearings Only SWAY BAR SET CLUTCH BELL 14T CLUTCH BELL 15T 2 SPEED SECOND GEAR SET (39/18 TOOTH) 2 SPEED SECOND GEAR SET (37/20 TOOTH) FIBER BRAKE DISK NITRO RACING CLUTCH 39T BALL DIFFERENTIAL SET GEAR BRACE SET 2 SPEED TRANSMISSION FOR Nitro RS4 (44/13-41/16) HEAT SINK ENGINE MOUNT 15mm For Non-Pull Start LIGHT WEIGHT FLYWHEEL 40mm For Non-Pull Start LIGHT WEIGHT FLYWHEEL 32mm For Non-Pull Start	4.50 4.50 4.50 4.50 4.50 32.00 9.00 13.00 13.00 14.00 35.00 34.00 45.00 45.00 17.00
801 804 805 808 810 913 827 833 834 834 834 848 850 865 870 877 898 899 899 899 899 899 899 899 899	1 1 1 1 2 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	FLY WHEEL COLLET 7x5mm PILOT GHAFT M5 CLUTCH GHOE BRAKE DISK SET CLUTCH BELL 13T CLUTCH BELL 13T CLUTCH SPRING 0.7mm GEAR SHAFT 5x64mm PULLEY GHAFT 5x70mm GRAY FLANGE PIPE 3x4.5x5.5mm BRAKE PLATE GET BELT 53M 182 (54T) 5.5mm BELT 53M 182 (54T) 5.5mm DIFF BEVEL GEAR SET AIR CLEANER SET SILICONE TUBE 2x4x330mm (FUEL LINE) MUFFLER GET SILICONE TUBE 6x10x100mm (MUFFLER) EXHAUST GASKET LINKAGE SET STOPPER 2.1x6x5mm PIVOT 2.5mm SUPER NITRO CHASSIS (ALUMINUM 175 T2.5mm PURPLE) BALL BEARING 4x8x3mm ZZ For Steering Post BALL BEARING 5x11x4mm ZZ	8.50 2.00 3.50 3.50 3.50 3.50 3.50 3.50 3.50 3	6833 6834 6835 6837 6838 6839 A111 A169 A209 A814 A815 * A819 A844 A865 A905 A907 A910 A915 A920 A926 A926	2 2 2 2 2 2 2 2 3 1 1 1 1 1 1 1 1 1 1 1	SHOCK SPRING 13x29x1.4mm (WHITE) SHOCK SPRING 13x29x1.45mm (YELLOW) SHOCK SPRING 13x29x1.5mm (RED) SHOCK SPRING 13x29x1.6mm (GREEN) SHOCK SPRING 13x29x1.6mm (GREEN) SHOCK SPRING 13x29x1.7mm (PURPLE) SHOCK SPRING 13x29x1.7mm (PURPLE) SUPER SHOCKS 46-56mm ALUMINUM PILOT SHAFT (Use With BO17 Ball Bearings Only SWAY BAR SET CLUTCH BELL 14T CLUTCH BELL 14T CLUTCH BELL 16T 2 SPEED SECOND GEAR SET (39/18 TOOTH) FIBER BRAKE DISK NITRO RACING CLUTCH 39T BALL DIFFERENTIAL SET GEAR BRACE SET 2 SPEED TRANSMISSION FOR Nitro RS4 (44/13-41/16) HEAT SINK ENGINE MOUNT 20mm For Pull Start HEAT SINK ENGINE MOUNT 15mm For Non-Pull Start LIGHT WEIGHT FLYWHEEL 40mm For Pull Start LIGHT WEIGHT FLYWHEEL 32mm For Non-Pull Start OIL CATCH FOR NITRO STAR ENGINES	4.00 4.50 4.50 4.50 4.50 32.00 21.00 7.00 13.00 13.00 14.00 35.00 34.00 69.00 45.00 10.00 17.00 19.00 45.00
801 804 805 808 810 913 827 833 834 834 834 846 866 870 875 897 898 965 907 907 907 907 907 907 907 907 907 907	1 1 1 2 1 1 1 2 1 1 1 1 1 1 1 5 1 1 1 1	FLY WHEEL COLLET 7x5mm PILOT SHAFT M5 CLUTCH SHOE BRAKE DISK SET CLUTCH BELL 13T CLUTCH SPRING 0.7mm GEAR SHAFT 5x64mm PULLEY SHAFT 5x70mm GRAY FLANGE PIPE 3x4.5x5.5mm BRAKE PLATE SET BELT 53M 162 (64T) 5.5mm BELT 53M 162 (64T) 5.5mm DIFF BEYEL GEAR SET AIR CLEANER SET SILICONE TUBE 2x4x330mm (FUEL LINE) MUFFLER SET SILICONE TUBE 6x10x100mm (MUFFLER) EXHAUST GASKET LINKAGE SET STOPPER 2.1x6x5mm PIVOT 2.5mm SUPER NITRO CHASSIS (ALUMINUM 175 T2.5mm PURPLE) BALL BEARING 4x2x3mm ZZ For Steering Post BALL BEARING 5x1x4mm ZZ BALL BEARING 5x1x4mm ZZ	8.50 2.00 3.50 3.50 3.50 6.00 1.00 3.50 3.50 6.00 6.00 6.00 6.00 6.00 1.50 2.50 3.00 2.50 3.00 1.400 14.00 15.00	6833 6834 6835 6837 6838 6839 A111 A169 A209 A814 A815 * A819 A844 A885 A905 A907 A910 A915 A920 A926 A926 A935 A959	2 2 2 2 2 2 2 2 3 1 1 1 1 1 1 1 1 1 1 2 2 1 1 1 1	SHOCK SPRING 13x29x1.4mm (WHITE) SHOCK SPRING 13x29x1.45mm (YELLOW) SHOCK SPRING 13x29x1.45mm (RED) SHOCK SPRING 13x29x1.65mm (RED) SHOCK SPRING 13x29x1.65mm (BRUE) SHOCK SPRING 13x29x1.65mm (BLUE) SHOCK SPRING 13x29x1.65mm (BLUE) SHOCK SPRING 13x29x1.7mm (PURPLE) SUPER SHOCKS 45-56mm ALUMINUM PILOT SHAFT (Use With BO17 Ball Bearings Only SWAY BAR SET CLUTCH BELL 14T CLUTCH BELL 15T 2 SPEED SECOND GEAR SET (39/18 TOOTH) 2 SPEED SECOND GEAR SET (39/18 TOOTH) 7 SPEED SECOND GEAR SET (37/20 TOOTH) 7 SPEED SECOND GEAR SET (37/20 TOOTH) 7 SPEED TRANSMISSION FOR NITRO RS 4 (44/13-41/16) 1 HEAT SINK ENGINE MOUNT 20mm For Pull Start 1 LIGHT WEIGHT FLYWHEEL 32mm For Non-Pull Start 1 LIGHT WEIGHT FLYWHEEL 32mm For Non-Pull Start 1 CIL CATCH FOR NITRO STAR ENGINES 1 NITRO RS4 REAR BRACE GRAPHITE SET SUPER FRONT ONE-WAY DIFFERENTIAL 39T	4.50 4.50 4.50 4.50 4.50 32.00 7.00 13.00 13.00 14.00 35.00 34.00 69.00 45.00 20.00 18.00 17.00 19.00 49.00
801 804 805 808 810 813 827 8330 8330 8340 847 848 850 865 870 874 875 876 877 877 877 877 877 877 877 877 877	1 1 1 2 1 1 1 2 1 1 1 1 1 1 1 5 1 1 1 1	FLY WHEEL COLLET 7x5mm PILOT SHAFT M5 CLUTCH SHOE BRAKE DISK SET CLUTCH BELL 13T CLUTCH SELL 13T CLUTCH SELL 13T CLUTCH SFRING O.7mm GEAR SHAFT 5x64mm PULLEY SHAFT 5x70mm GRAY FLANGE PIPE 3x4.5x5.5mm BRAKE PLATE SET BELT S3M 162 (54T) 5.5mm BELT S3M 162 (54T) 5.5mm DIFF BEYEL GEAR SET AIR CLEANER SET SILICONE TUBE 2x4x330mm (FUEL LINE) MUFFLER SET SILICONE TUBE 6x10x100mm (MUFFLER) EXHAUST GASKET LINKAGE SET STOPPER 2.1x6x5mm PIVOT 2.5mm SUPER NITRO CHASSIS (ALUMINUM 17S T2.5mm PURPLE) BALL BEARING 4x8x3mm ZZ For Steering Post BALL BEARING 5x11x4mm ZZ CLUTCH NEEDLE BEARING 5x8mm	8.50 2.00 3.50 3.50 3.50 6.00 1.00 3.50 3.50 5.00 6.00 6.00 5.00 3.50 1.20 8.00 1.50 2.50 3.00 2.50 3.00 14.00 14.00 15.00 5.80	6833 6834 6835 6837 6838 6839 A111 A169 A209 A814 A815 * A819 A844 A885 A905 A907 A910 A915 A920 A925 A928 A928	2 2 2 2 2 2 2 2 3 1 1 1 1 1 1 1 1 2 2 1 1 1 1	SHOCK SPRING 13x29x1.4mm (WHITE) SHOCK SPRING 13x29x1.45mm (YELLOW) SHOCK SPRING 13x29x1.45mm (RED) SHOCK SPRING 13x29x1.6mm (RED) SHOCK SPRING 13x29x1.6mm (RED) SHOCK SPRING 13x29x1.7mm (PURPLE) SHOCK SPRING 13x29x1.7mm (PURPLE) SUPER SHOCKS 46-56mm ALUMINUM PILOT SHAFT (Use With BO17 Ball Bearings Only SWAY BAR SET CLUTCH BELL 14T CLUTCH BELL 14T CLUTCH BELL 16T 2 SPEED SECOND GEAR SET (39/18 TOOTH) FIBER BRAKE DISK NITRO RACING CLUTCH 39T BALL DIFFERENTIAL SET GEAR BRACE SET 2 SPEED TRANSMISSION For Nitro RS4 (44/13-41/16) HEAT SINK ENGINE MOUNT 20mm For Pull Start HEAT SINK ENGINE MOUNT 15mm For Non-Pull Start LIGHT WEIGHT FLYWHEEL 40mm For Pull Start LIGHT WEIGHT FLYWHEEL 40mm For Pull Start OIL CATCH FOR NITRO STAR ENGINES NITRO RS4 REAR BRACE GRAPHITE SET	4.50 4.50 4.50 4.50 4.50 32.00 7.00 7.00 13.00 13.00 14.00 34.00 69.00 45.00 20.00 18.00 17.00 19.00 49.00
801 804 805 808 810 8313 8327 8338 840 847 848 850 865 870 8375 8390 8395 8395 8395 8395 8395 8395 8395 8395	1 1 1 2 1 1 1 2 2 1 1 1 1 2 2 2 1 1 14	FLY WHEEL COLLET 7x5mm PILOT SHAFT M5 CLUTCH SHOE BRAKE DISK SET CLUTCH BELL 13T CLUTCH SELL 13T CLUTCH SERING 0.7mm GEAR SHAFT 5x64mm PULLEY SHAFT 5x70mm GRAY FLANGE PIPE 3x4.5x5.5mm BRAKE PLATE SET BELT 53M 162 (54T) 5.5mm BELT 53M 162 (54T) 5.5mm DIFF BEVEL GEAR SET AIR CLEANER SET SILLCONE TUBE 2x4x330mm (FUEL LINE) MUFFLER SET SILICONE TUBE 6x10x100mm (MUFFLER) EXHAUST GASKET LINKAGE SET STOPPER 2.1x6x5mm PIVOT 2.5mm SUPER NITRO CHASSIS (ALUMINUM 175 T2.5mm PURPLE) BALL BEARING 4x8x3mm ZZ For Steering Post BALL BEARING 5x16x4mm ZZ CLUTCH NEEDLE BEARING 5x8mm BALL CUP	8.50 2.00 3.50 3.50 3.50 6.00 1.00 3.50 3.50 5.00 6.00 6.00 5.00 3.50 1.20 8.00 1.50 2.50 3.00 2.50 3.00 14.00 14.00 15.00 5.00 5.00	6833 6834 6835 6837 6838 6839 A111 A169 A209 A814 A815 * A819 A844 A885 A905 A907 A910 A915 A920 A926 A926 A935 A959	2 2 2 2 2 2 2 2 3 1 1 1 1 1 1 1 1 2 2 1 1 1 1	SHOCK SPRING 13x29x1.4mm (WHITE) SHOCK SPRING 13x29x1.45mm (YELLOW) SHOCK SPRING 13x29x1.45mm (RED) SHOCK SPRING 13x29x1.65mm (RED) SHOCK SPRING 13x29x1.65mm (BRUE) SHOCK SPRING 13x29x1.65mm (BLUE) SHOCK SPRING 13x29x1.65mm (BLUE) SHOCK SPRING 13x29x1.7mm (PURPLE) SUPER SHOCKS 45-56mm ALUMINUM PILOT SHAFT (Use With BO17 Ball Bearings Only SWAY BAR SET CLUTCH BELL 14T CLUTCH BELL 15T 2 SPEED SECOND GEAR SET (39/18 TOOTH) 2 SPEED SECOND GEAR SET (39/18 TOOTH) 7 SPEED SECOND GEAR SET (37/20 TOOTH) 7 SPEED SECOND GEAR SET (37/20 TOOTH) 7 SPEED TRANSMISSION FOR NITRO RS 4 (44/13-41/16) 1 HEAT SINK ENGINE MOUNT 20mm For Pull Start 1 LIGHT WEIGHT FLYWHEEL 32mm For Non-Pull Start 1 LIGHT WEIGHT FLYWHEEL 32mm For Non-Pull Start 1 CIL CATCH FOR NITRO STAR ENGINES 1 NITRO RS4 REAR BRACE GRAPHITE SET SUPER FRONT ONE-WAY DIFFERENTIAL 39T	4.50 4.50 4.50 4.50 4.50 3.00 7.00 7.00 13.00 14.00 9.00 45.00 20.00 18.00 19.00 45.00 40.00
601 604 605 608 310 313 327 330 334 338 340 347 348 360 365 370 375 399 395 398	1 1 1 2 1 1 1 2 1 1 1 1 1 1 1 5 1 1 1 1	FLY WHEEL COLLET 7x5mm PILOT SHAFT M5 CLUTCH SHOE BRAKE DISK SET CLUTCH BELL 13T CLUTCH SELL 13T CLUTCH SELL 13T CLUTCH SFRING O.7mm GEAR SHAFT 5x64mm PULLEY SHAFT 5x70mm GRAY FLANGE PIPE 3x4.5x5.5mm BRAKE PLATE SET BELT S3M 162 (54T) 5.5mm BELT S3M 162 (54T) 5.5mm DIFF BEYEL GEAR SET AIR CLEANER SET SILICONE TUBE 2x4x330mm (FUEL LINE) MUFFLER SET SILICONE TUBE 6x10x100mm (MUFFLER) EXHAUST GASKET LINKAGE SET STOPPER 2.1x6x5mm PIVOT 2.5mm SUPER NITRO CHASSIS (ALUMINUM 17S T2.5mm PURPLE) BALL BEARING 4x8x3mm ZZ For Steering Post BALL BEARING 5x11x4mm ZZ CLUTCH NEEDLE BEARING 5x8mm	8.50 2.00 3.50 3.50 3.50 6.00 1.00 3.50 3.50 5.00 6.00 6.00 5.00 3.50 1.20 8.00 1.50 2.50 3.00 2.50 3.00 14.00 14.00 15.00 5.80	6833 6834 6835 6837 6838 6839 A111 A169 A209 A814 A815 * A819 A844 A865 A905 A907 A910 A915 A926 A926 A928 A935 A959 A970	2 2 2 2 2 2 3 1 1 1 1 1 1 1 1 2 2 1 1 1 1	SHOCK SPRING 13x29x1.4mm (WHITE) SHOCK SPRING 13x29x1.45mm (YELLOW) SHOCK SPRING 13x29x1.45mm (RED) SHOCK SPRING 13x29x1.65mm (RED) SHOCK SPRING 13x29x1.65mm (BRUE) SHOCK SPRING 13x29x1.65mm (BLUE) SHOCK SPRING 13x29x1.65mm (BLUE) SHOCK SPRING 13x29x1.7mm (PURPLE) SUPER SHOCKS 45-56mm ALUMINUM PILOT SHAFT (Use With BO17 Ball Bearings Only SWAY BAR SET CLUTCH BELL 14T CLUTCH BELL 15T 2 SPEED SECOND GEAR SET (39/18 TOOTH) 2 SPEED SECOND GEAR SET (39/18 TOOTH) 7 SPEED SECOND GEAR SET (37/20 TOOTH) 7 SPEED SECOND GEAR SET (37/20 TOOTH) 7 SPEED TRANSMISSION FOR NITRO RS 4 (44/13-41/16) 1 HEAT SINK ENGINE MOUNT 20mm For Pull Start 1 LIGHT WEIGHT FLYWHEEL 32mm For Non-Pull Start 1 LIGHT WEIGHT FLYWHEEL 32mm For Non-Pull Start 1 CIL CATCH FOR NITRO STAR ENGINES 1 NITRO RS4 REAR BRACE GRAPHITE SET SUPER FRONT ONE-WAY DIFFERENTIAL 39T	4.50 4.50 4.50 4.50 4.50 32.00 7.00 13.00 13.00 14.00 35.00 34.00 69.00 45.00 20.00 18.00 17.00 19.00 49.00