

## #2828 - HAWK/RADICATOR FRONT SUSPENSION KIT

### CONTENTS:

Front Body Mount (1)/Posts (2)/Screws (2)  
Front Shock Tower (1)  
Fiberglass Plate (1)  
7x26mm Aluminum Posts (2)  
3x12mm Self-Tapping Screws (4)  
3x6 Roundhead Machine Screws (2)  
3x14 Countersunk Machine Screws


This kit requires 1 Pair of Long Shocks. There are several different types of long front shocks to choose from (they are not included in part #2828). The part numbers are as follows:

(1) Pair long plastic shocks (white) ..... 1760  
(1) Pair Pro-Series plastic shocks (black) ..... 2850  
(1) Pair long, gold-anodized, T-6 aluminum shocks ... 1660  
(1) Pair long, blue-anodized, T-6 aluminum shocks ... 1960

(1) Pair long, hard-anodized, teflon-coated,  
T-6 aluminum shocks ..... 4760  
(1) Pair springs, stainless-steel ..... 4651



### INSTRUCTIONS:

- 1) Remove the front bumper, bulkhead, servo saver and steering servo.
- 2) Remove the upper section of plastic (see drawing) from both sides of the chassis.
- 3) Remove the bulkhead and replace the old shock tower with the new tallshock tower.
- 4) Countersink the two holes where the 3x14mm countersunk machine screws secure the 7x26mm aluminum posts to the chassis (Hawk only).
- 5) Install the servo, servo saver, new front body mount (Hawk only), long shocks (not included), bulkhead/shock tower assembly, and the bumper.
- 6) Install the fiberglass plate as shown in the assembly drawing.

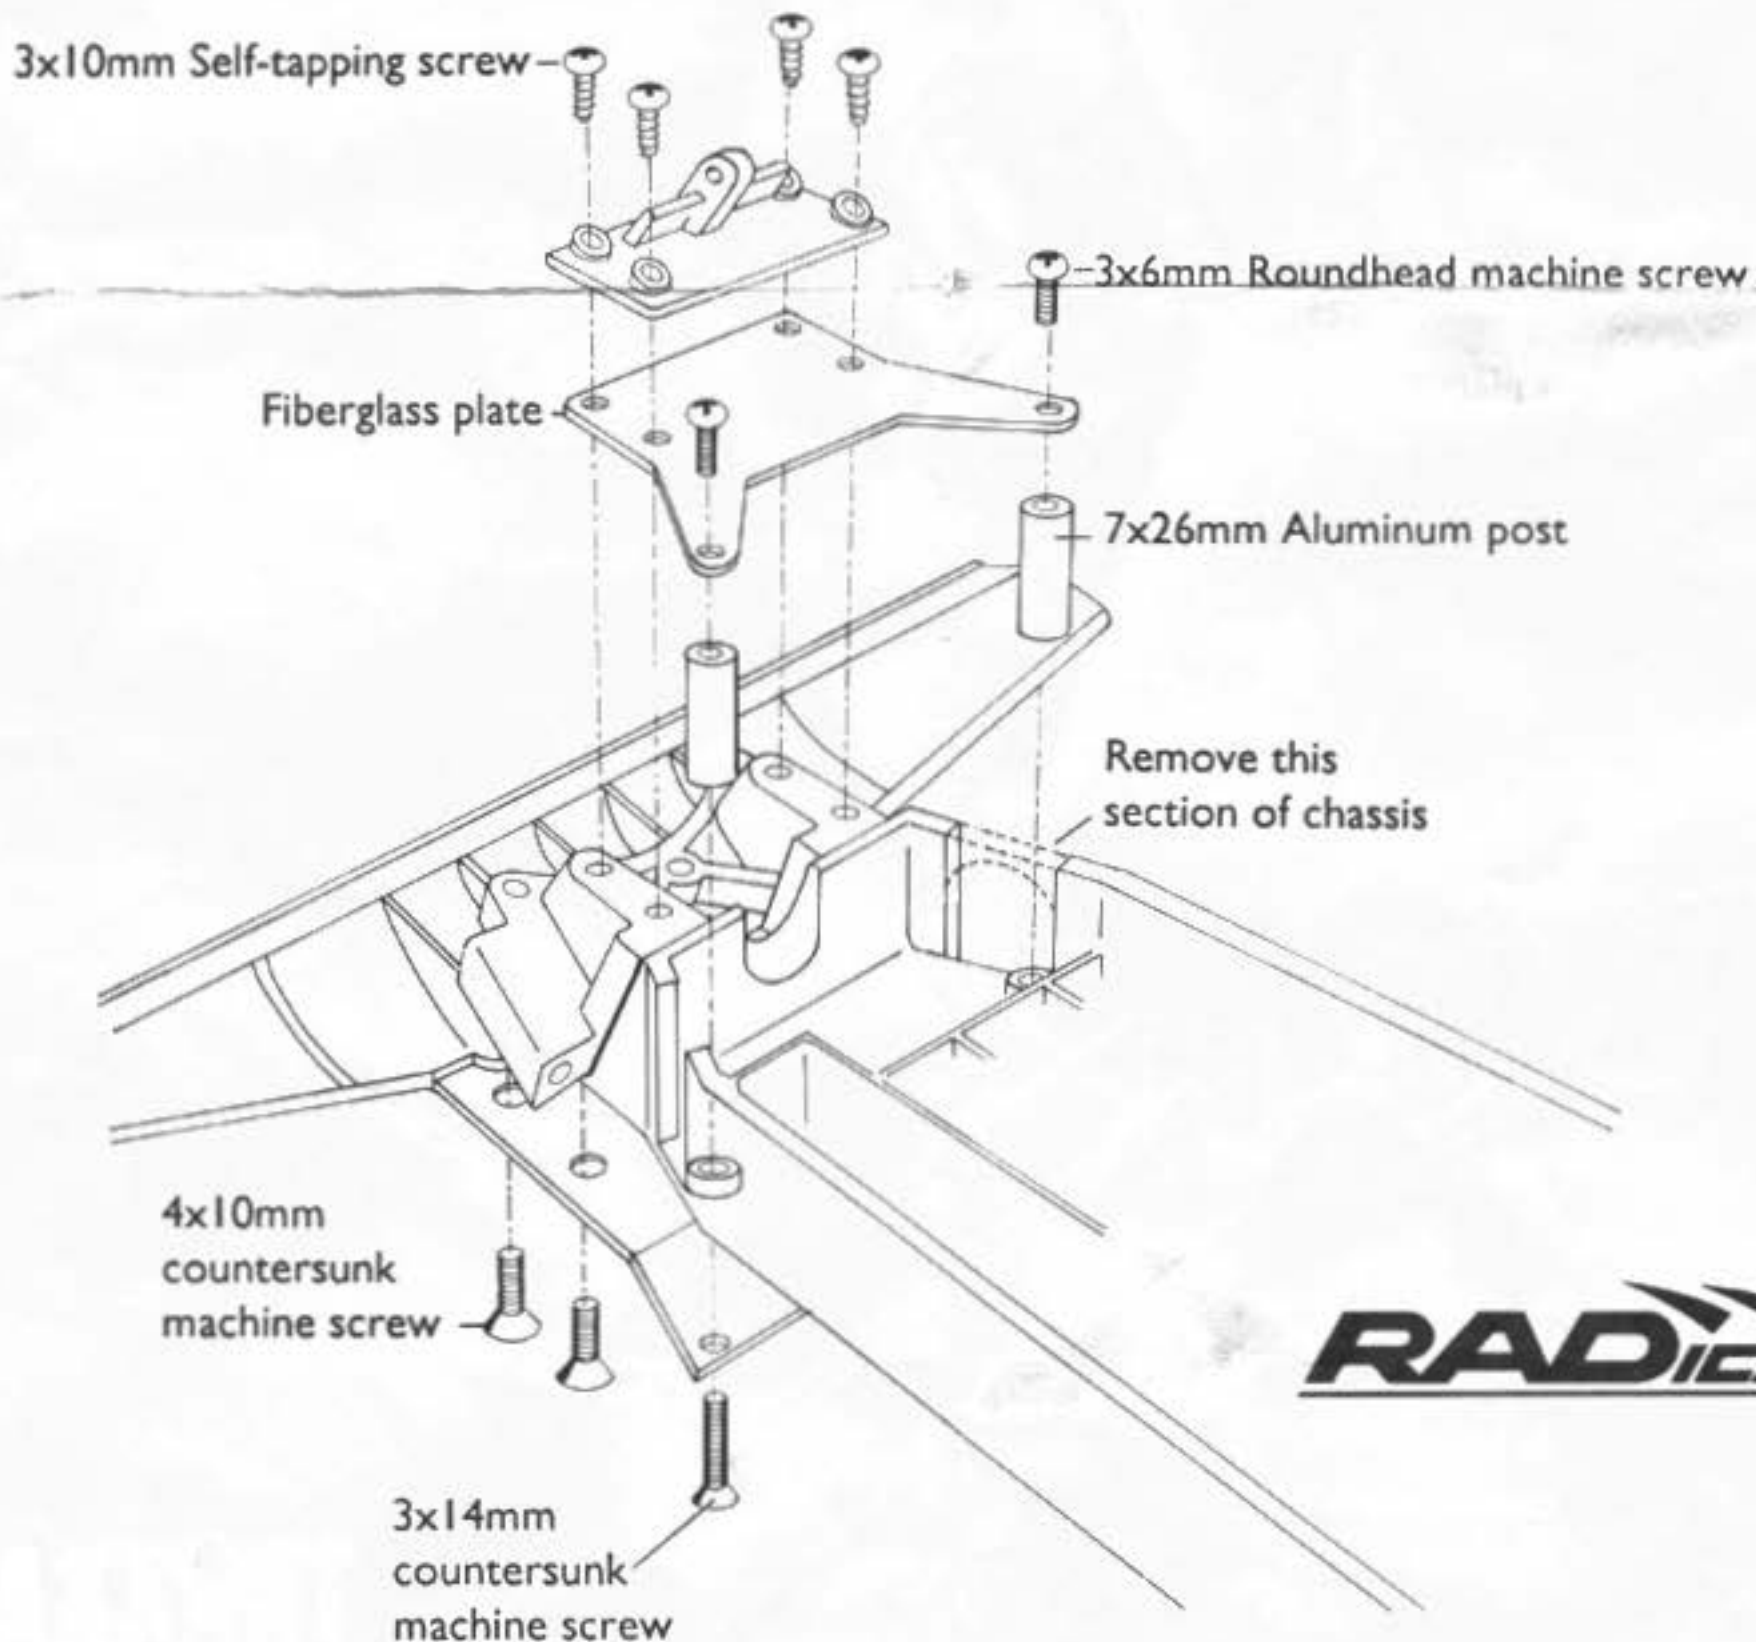

**RADICATOR**

# HAWK

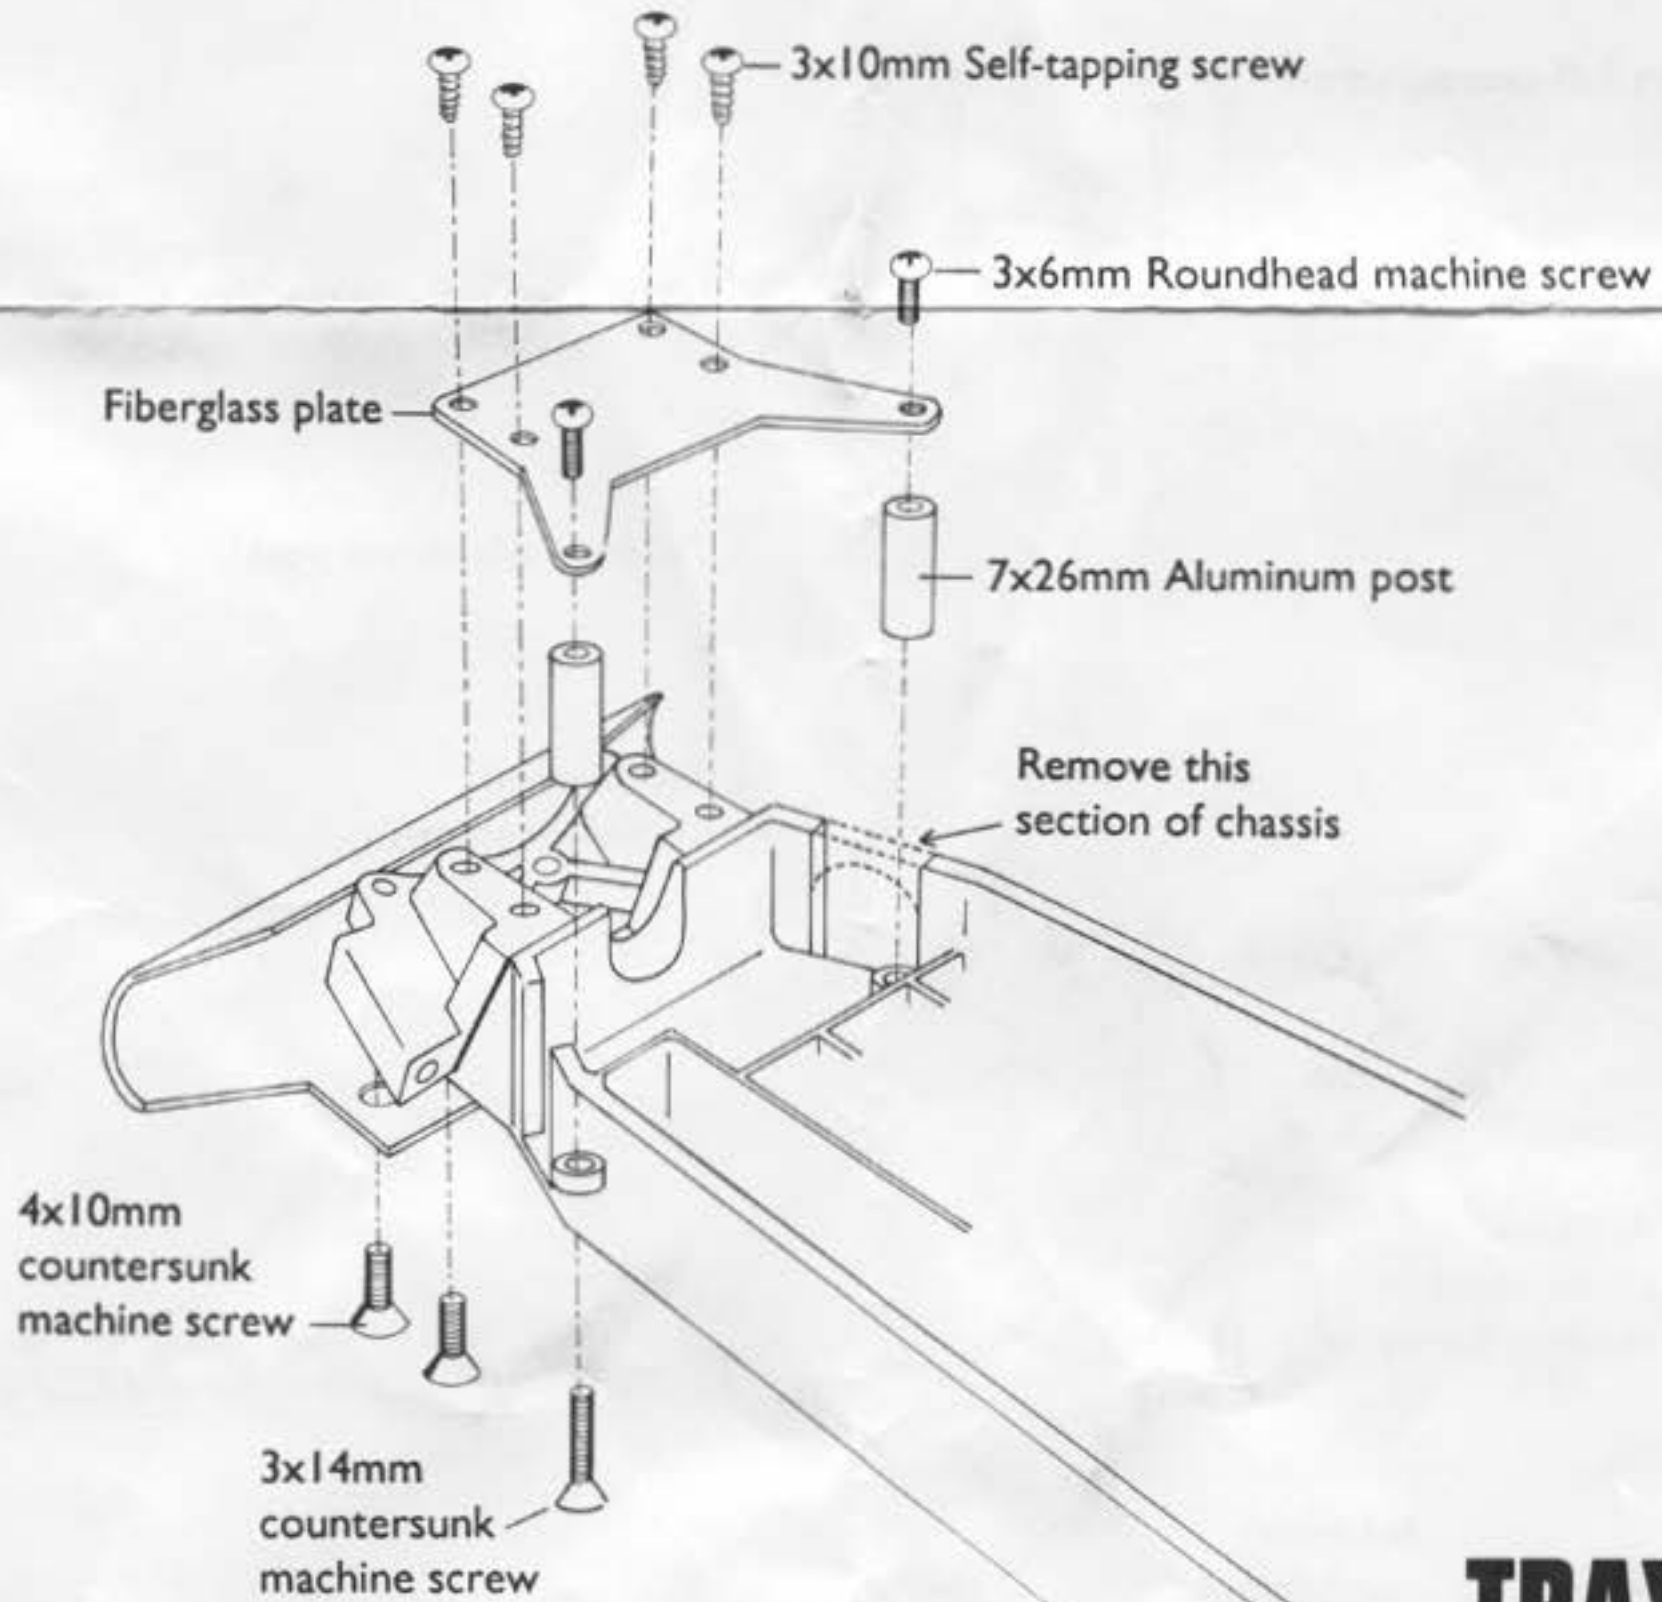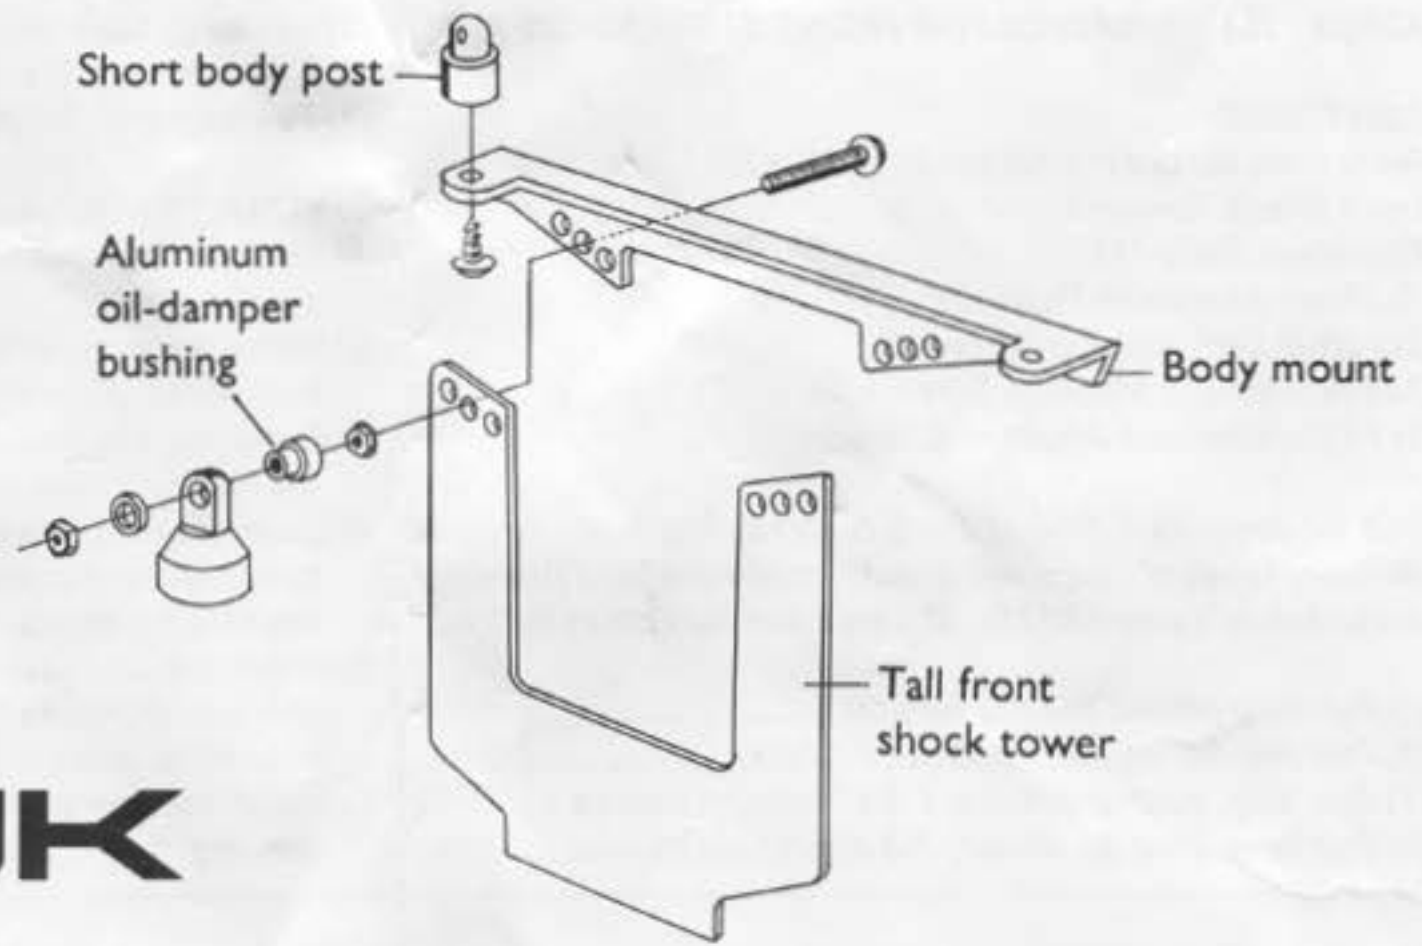

**TRAXXAS**

12150 Shiloh Rd., Dallas, TX. 75228